


How to Set Shimaden SRS Back Top PV




How to Set Shimaden SRS RUN/RST (Use Programmer Mode)

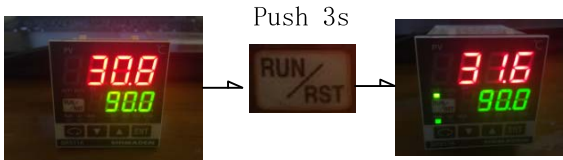

How to Disable Shimaden SRS RUN/RST (Power On Auto Run With General Mode)



How to Set Shimaden SRS EV1 or EV2

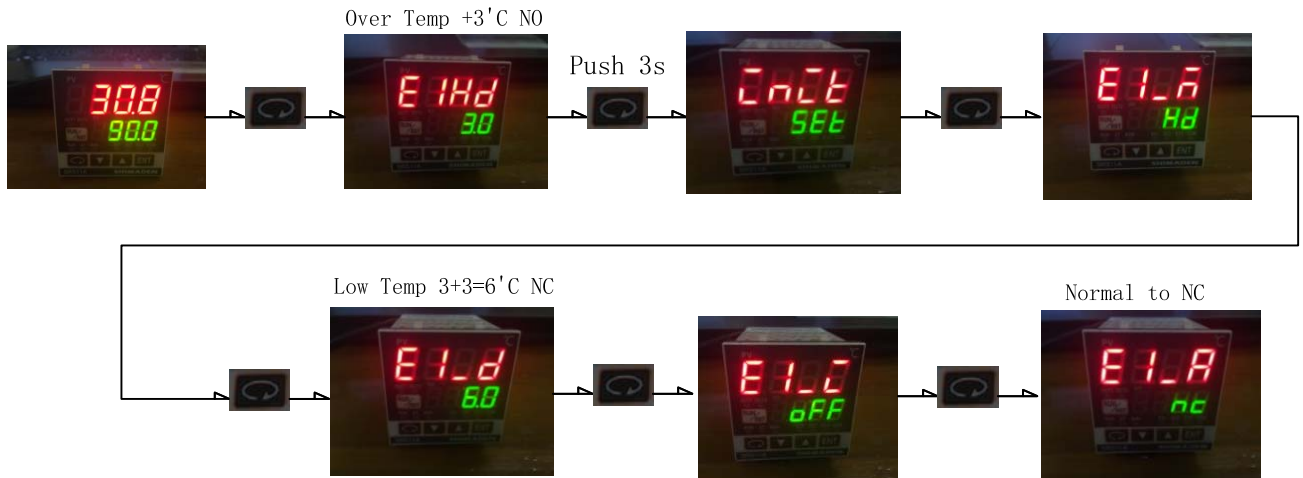

How to Set Shimaden SRS Input Type



| | | | | | |
|---|-------------------|--|------------------|--------------------------------|-----|
| Itemref | Quantity | Title/Name, designation, material, dimension etc | | Article No./Reference | |
| Designed by XXX | Checked by XXX | Approved by - date XXX - 00/00/00 | File name xxx | TITLE Electric Test Furnace | |
| บริษัท เอดดี เฟอร์เนส จำกัด ADD FURNACE CO.,LTD. https://www.add-furnace.com sales@add-furnace.com Tel:02-888-3472 Fax:02-888-3258 | | xxx | xxx | xxx | xxx |
| Scale(A4) 1:x | | Edition 0 | Sheet 1/1 | View(Third) | |