



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Field bus interface PFA Module subrack BGT

Technical Information · GB

6.2.1.6 Edition 03.11



- 19" module for easy transmission of activation signals and feedbacks from burner control units via fieldbus cable
- Remote maintenance and diagnostics facilities
- Saves installation and wiring costs
- Units can be exchanged during bus mode operation thanks to industrial plug connector system
- Bus interface remains in operation when PFA is switched off (standby mode)
- Certification for PROFIBUS DP



www.kromschroeder.com





บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

Contents

Field bus interface PFA Module subrack BGT	1
Contents	2
1 Application	3
1.1 Examples of application.....	5
1.1.1 PFA 700 with PFU 760, staged On/Off burner control.....	5
1.1.2 PFA 700 with PFU 760L, staged High/Low burner control	5
1.1.3 PFA 710 with PFU 780, stage-controlled main burner with alternating pilot burner.....	6
1.1.4 PFA 710 with PFU 780, stage-controlled main burner with permanent pilot burner	6
2 Certification	7
2.1 EC type-tested and certified	7
2.2 Approval for Russia.....	7
3 Function	8
3.1 Safety-related control signals.....	8
3.2 Air valve.....	8
3.3 BCSoft.....	9
3.4 Configuration, Master-Slave procedure	9
3.5 Addressing	9
3.6 Network technology	10
3.7 Configuration.....	10
3.7.1 Bus communication	10
3.8 Program status	12
3.9 Fault signalling	12
3.10 Connection diagrams	13
3.10.1 PFA 700 and BGT SA-9U/1DP700.....	13
3.10.2 PFA 710 and BGT SA-8U/1DP.....	14
3.10.3 Flame control using an electrode.....	15
3.10.4 Flame control with UV sensor UVS	15
3.10.5 Flame control with UV sensor for continuous operation UVD 1	15
4 Parameters	16
4.1 Scanning the parameters	17
4.2 Changing parameters	17
4.3 Manual operation.....	17
4.3.1 PFA 700	18
4.3.2 PFA 710	19
5 Selection	20
5.1 PFA	20
5.1.1 Selection table.....	20
5.1.2 Type code	20
5.2 BGT.....	20
5.2.1 Selection table	20
5.2.2 Type code.....	20
6 Project planning information	21
6.1 Installation	21
6.2 Old-new PFA exchange	21
6.3 Wiring.....	22
6.3.1 Safety-related control signals	22
6.3.2 EMC.....	22
6.3.3 PROFIBUS plug connector	22
6.4 Manual operation.....	22
7 Accessories	23
7.1 PROFIBUS plug connector	23
7.2 Opto-adapter and BCSoft	23
7.3 "Changed parameters" stickers.....	23
8 Technical data	24
8.1 PFA 700, PFA 710	24
8.1.1 Operating controls	24
8.2 BGT.....	25
8.2.1 Dimensions.....	25
9 Legend	



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

1 Application



In module subrack BGT, up to nine burner control units can be inserted together with the PFA 700, while with the PFA 710, the maximum is eight burner control units.

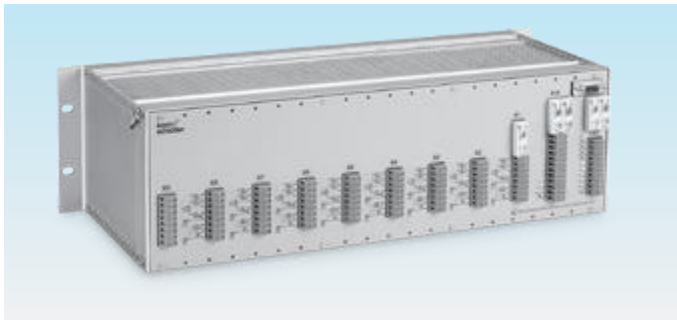

The BGT is provided with a backplane with screw terminals for simple, reliable wiring.

The conventional wide-spread systems used in industrial furnace and kiln construction require bridging of large distances for signal processing.

The field bus interface PFA is used in conjunction with the pre-wired module subrack BGT for interworking of burner

control units PFU to industrial communication networks using PROFIBUS DP to control and monitor burners in industrial furnaces and firing systems, e.g. in the iron and steel, glass and ceramics, or plastics and chemical industries.

As a standardized fieldbus system, the PROFIBUS DP considerably reduces development, installation and commissioning costs compared to conventional wiring.

The use of a standard bus system offers massive benefits compared to manufacturer-specific bespoke solutions. Time-tested hardware components, standardized connection methods and a series of tools of bus diagnostics and optimization are available on the market from a whole range of manufacturers. The widespread use of the system ensures that the planning and service personnel are very familiar with how the system operates and how to handle it and can therefore operate the system efficiently.

PFA 700 with BGT SA-9U/1DP700

For interworking of up to nine burner control units PFU 760 for directly ignited burners to communication networks using PROFIBUS DP. The PFA 700 is plugged into the module subrack with printed-circuit board and rear terminal strip, together with the burner control units.

PFA 710 with BGT SA-8U/1DP710

For interworking of up to eight burner control units PFU 780 for pilot and main burners to communication networks using PROFIBUS DP. The PFA 710 is plugged into the module subrack with printed-circuit board and rear terminal strip, together with the burner control units.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com



Bogie hearth forging furnace in the metallurgical industry

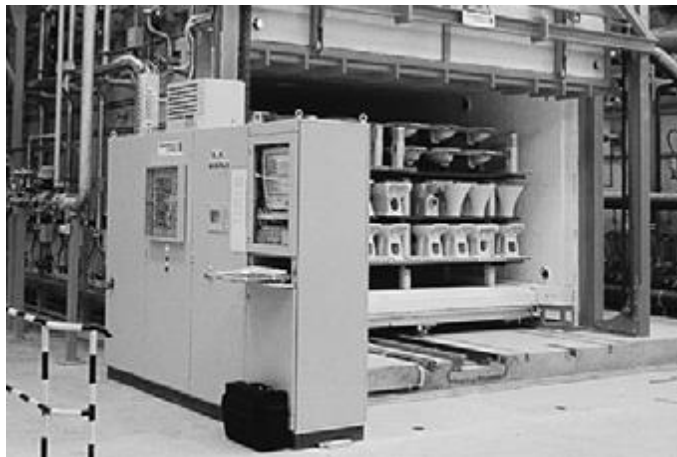

Intermittent shuttle kiln in the ceramics industry



Walking beam furnace with overhead firing



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

1.1 Examples of application


1.1.1 PFA 700 with PFU 760, staged On/Off burner control

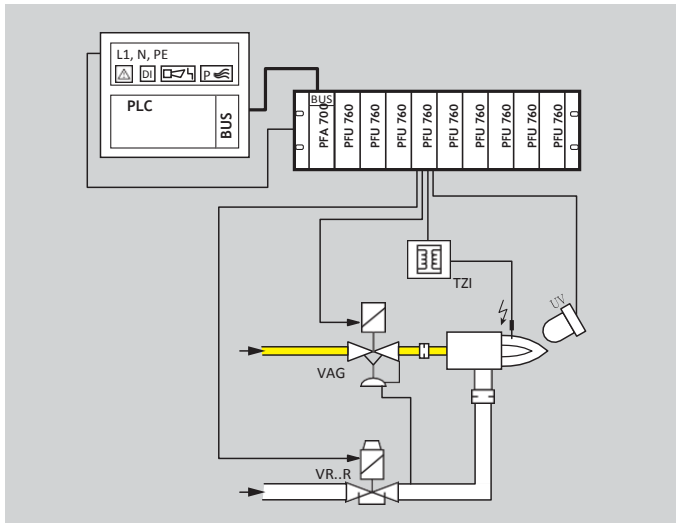

The burner can be started with reduced capacity.

A UV sensor monitors the flame signal from the burner. UV sensor UVD 1 is used for continuous operation, UV sensor UVS for intermittent operation.


1.1.2 PFA 700 with PFU 760L, staged High/Low burner control

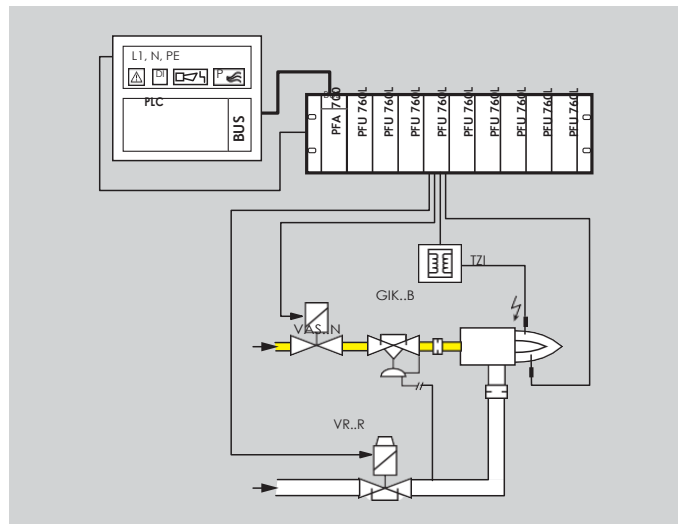

The burner starts at low-fire rate. When the operating state is reached, the PFU 760L advises the control unit. The PLC can now pulse the air valve in order to control the burner capacity.



1.1.3 PFA 710 with PFU 780, stage-controlled main burner with alternating pilot burner

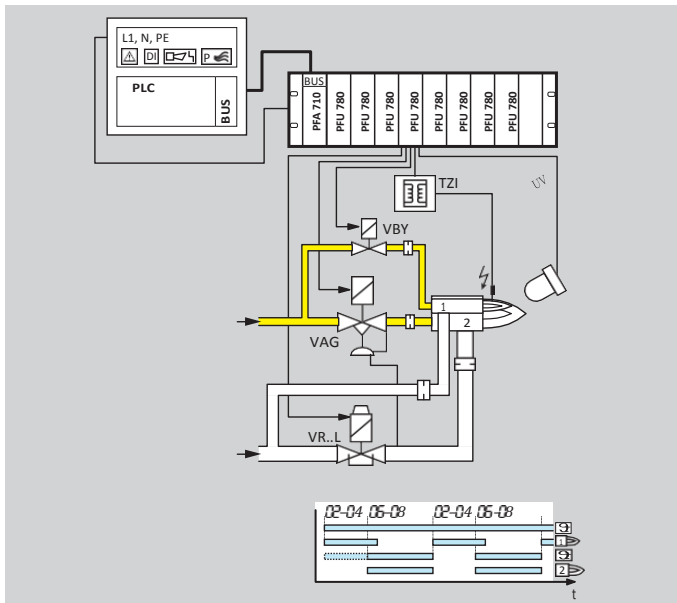


Control: main burner ON/OFF

The main burner can be started with reduced capacity after the operating signal from the pilot burner has been detected. The pilot burner is switched off automatically after the main burner has started up. When the main burner is switched off, the pilot burner automatically switches on again.

A UV sensor monitors the flame signal from pilot and main burners. UV sensor UVD 1 is used for continuous operation, UV sensor UVS for intermittent operation.

1.1.4 PFA 710 with PFU 780, stage-controlled main burner with permanent pilot burner

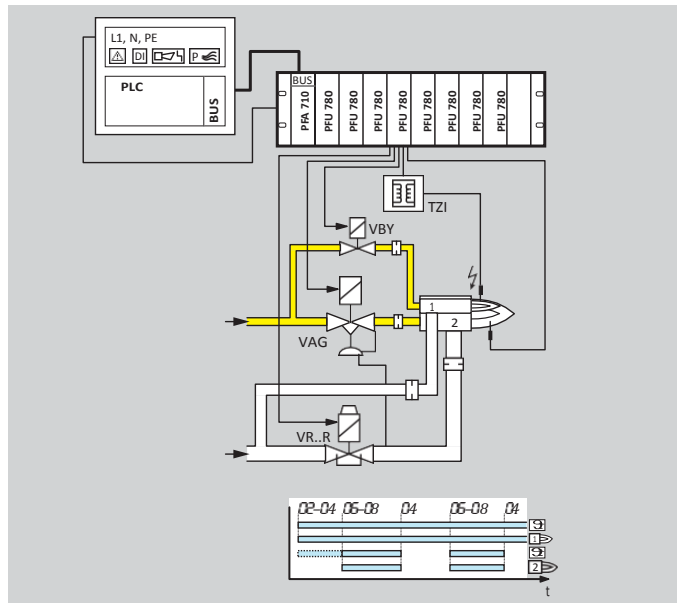

Control: main burner ON/OFF

The main burner can be started with reduced capacity after the operating signal from the pilot burner has been detected. Pilot and main burners can be operated simultaneously. Both are ionization-controlled independently.

Control: main burner High/Low

The main burner starts at low-fire rate. When the operating state is reached, the PFU 780L advises the control unit. The PLC can now pulse the air valve in order to control the capacity of the main burner.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

2 Certification

2.1 EC type-tested and certified



- Low Voltage Directive (2006/95/EC) in conjunction with EN 60730,
- Electromagnetic Compatibility Directive (2004/108/EC) in conjunction with the relevant standards relating to radiation.

2.2 Approval for Russia



Certified by Gosstandart pursuant to GOST-R.



บริษัท เอดีดี เฟอร์เนส จำกัด


ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

3 Function

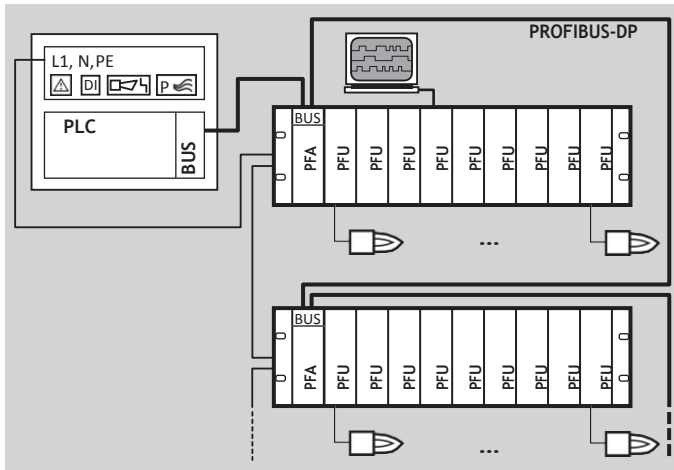

The field bus interface PFA 700 integrates up to nine burner control units PFU 760 into industrial communication networks using PROFIBUS DP. The PFA 700 is plugged into the pre-wired module subrack BGT SA-9U/1DP700, together with the burner control units.

The field bus interface PFA 710 integrates up to eight burner control units PFU 780 into industrial communication networks using PROFIBUS DP. The PFA 710 is plugged into the pre-wired module subrack BGT SA-8U/1DP710, together with the burner control units.

To the rear of the module subrack, there is a D-Sub socket for connection to PROFIBUS DP and connection terminals in order to send input and output signals to ignition transformers, gas and air valves or UV sensors, for example, via the individual burner control units PFU.

PROFIBUS DP

PROFIBUS is a manufacturer-independent, open fieldbus standard for diverse applications.

PROFIBUS DP is a bus variant for communication between automation systems and distributed peripherals at the field level, optimized for speed and low connection costs.

On PROFIBUS DP, the individual bus stations are connected via a 2-core shielded cable as standard.

The bus system transfers the control signals for starting, re-setting and for controlling the air valve to purge the furnace or kiln or for cooling in start-up position and heating during operation from the control system (PLC) to the PFA. In the opposite direction it sends information on the operating status.

3.1 Safety-related control signals

Control signals for the safety interlocks and digital input are transferred independently of the bus communication by separate cables.

3.2 Air valve

The air valves used to purge the furnace or kiln can either be activated via the PROFIBUS or via a separate cable (to terminal strip X10 of the BGT – at 24 V DC to terminal 12 or 13, or at mains voltage to terminal 18).

It is possible to use the PROFIBUS to communicate that purging is being carried out (by connecting mains voltage to terminal 17 of terminal strip X10 of the B



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

3.3 BCSoft

The Windows software BCSoft allows extended access to individual statistics, visualization of the process values and the parameterization of the field bus interface via an optical interface. Unit parameters can be adjusted to the specific application.

3.4 Configuration, Master-Slave procedure


PROFIBUS DP is structured as a Master-Slave system. This allows mono-master or multi-master systems to be implemented.

A distinction is made between three device types:

- DP Masters Class 1 (DPM1)
DPM1 devices are central controllers which exchange data with the distributed stations (slaves) on the basis of a defined cycle. This includes, for instance, the PLC, PC, CNC or VME systems with which the PROFIBUS DP is operated.
- DP Masters Class 2 (DPM2)
DPM2 devices are programming, project planning or operator-control devices. They are used for configuration and commissioning of the system or for system operation and visualization in ongoing operation.
- DP slaves
The devices which transmit input information from the periphery to the master and which issue output information from the master to the periphery are referred to as “slaves”.
This also includes the PFA.

3.5 Addressing

A maximum of 126 units (masters and slaves) can be connected to a PROFIBUS DP system. Each station is assigned an individual PROFIBUS address which can be set between 0 and 126 using two code switches on the PFA board.

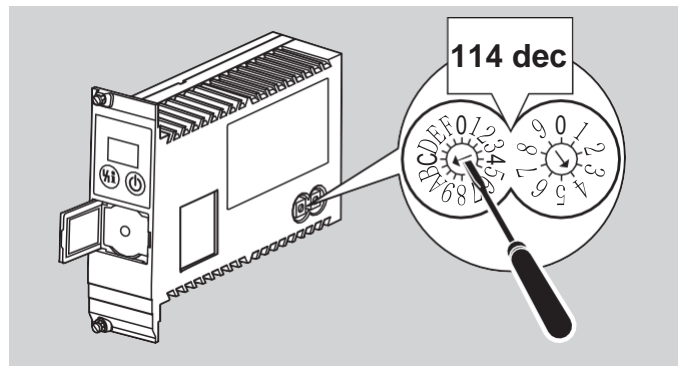



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

3.6 Network technology

All devices are connected in a bus structure (line). Up to 32 stations (masters or slaves) can be connected in a single segment. The beginning and end of each segment is fitted with an active bus terminator. Both bus terminators must have a permanent power supply to ensure error-free operation. The power supply for the bus terminator is provided by the PFA. The bus terminator can be connected in the bus connection plug.

If more than 32 stations are implemented or if there is a need to expand the network area, repeaters (amplifiers) must be used to link the individual bus segments.

3.7 Configuration

When planning a PROFIBUS DP system, unit-specific parameters of each station are to be taken into account.

To allow for simple and standardized planning, the parameters of the PFA have been summarized in a so-called device master data file (GSD). The file structure is standardized so that it can be read by the planning devices of different manufacturers.

The GSD file is supplied on a CD with the PFA. The GSD file can also be ordered at www.docutheek.com. The steps required to copy the file are described in the instructions for the automation system.

3.7.1 Bus communication

Input/output bytes: The programmer can choose the data to be transferred.

	Input bytes (PFA ► master)	Output bytes (master ► PFA)
PFA 700	5 bytes	3 bytes
PFA 710	5 bytes	5 bytes

Baud rate: up to 1500 kbit/s.

The max. range per segment depends on the baud rate:

Baud rate [kbit/s]	Range	
	[m]	[ft]
93.75	1200	3937
187.5	1000	3280
500	400	1312
1500	200	656

The specified ranges may be increased by using repeaters. No more than three repeaters should be connected in series.

The specified ranges relate to bus cable type A (two-core, shielded and twisted), e.g.:

Siemens, Order No.: 6XV1830-0EH10, or
Lapp cable unitronic, Order No.: 2170-220T.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

PFA 700

Input bytes (PFA ► master)

Bit	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4
0	↓ PFU 1	↓ PFU 9	↘ PFU 8	↙ PFU 7	↖ PFA
1	↓ PFU 2	↘ PFU 1	↘ PFU 9	↙ PFU 8	
2	↓ PFU 3	↘ PFU 2	↙ PFU 1	↙ PFU 9	
3	↓ PFU 4	↘ PFU 3	↙ PFU 2	← 1	
4	↓ PFU 5	↘ PFU 4	↙ PFU 3	← 2	
5	↓ PFU 6	↘ PFU 5	↙ PFU 4	← 3	
6	↓ PFU 7	↘ PFU 6	↙ PFU 5	← 4	
7	↓ PFU 8	↘ PFU 7	↙ PFU 6	↖ PFA	↙ PFA

Output bytes (master ► PFA)

Bit	Byte 0	Byte 1	Byte 2
0	↖ PFU 1	↖ PFU 9	↖ PFU 8
1	↖ PFU 2	↖ PFU 1	↖ PFU 9
2	↖ PFU 3	↖ PFU 2	↙ PFA
3	↖ PFU 4	↖ PFU 3	↖ PFA
4	↖ PFU 5	↖ PFU 4	➔ 1
5	↖ PFU 6	↖ PFU 5	➔ 2
6	↖ PFU 7	↖ PFU 6	➔ 3
7	↖ PFU 8	↖ PFU 7	➔ 4

PFA 710

Input bytes (PFA ► master)

Bit	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4
0	↓ PFU 1	↓ PFU 3	↓ PFU 5	↓ PFU 7	↖ PFA
1	↖ PFU 1	↖ PFU 3	↖ PFU 5	↖ PFU 7	← 1
2	↖ PFU 1	↖ PFU 3	↖ PFU 5	↖ PFU 7	← 2
3	↙ PFU 1	↙ PFU 3	↙ PFU 5	↙ PFU 7	← 3
4	↓ PFU 2	↓ PFU 4	↓ PFU 6	↓ PFU 8	← 4
5	↖ PFU 2	↖ PFU 4	↖ PFU 6	↖ PFU 8	↖ PFA
6	↖ PFU 2	↖ PFU 4	↖ PFU 6	↖ PFU 8	
7	↙ PFU 2	↙ PFU 4	↙ PFU 6	↙ PFU 8	↙ PFA

Output bytes (master ► PFA)

Bit	Byte 0	Byte 1	Byte 2	Byte 3	Byte 4
0	↖ PFU 1	↖ PFU 3	↖ PFU 5	↖ PFU 7	↙ PFA
1	↖ PFU 1	↖ PFU 3	↖ PFU 5	↖ PFU 7	➔ 1
2	↖ PFU 1	↖ PFU 3	↖ PFU 5	↖ PFU 7	➔ 2
3					➔ 3
4	↖ PFU 2	↖ PFU 4	↖ PFU 6	↖ PFU 8	➔ 4
5	↖ PFU 2	↖ PFU 4	↖ PFU 6	↖ PFU 8	↖ PFA
6	↖ PFU 2	↖ PFU 4	↖ PFU 6	↖ PFU 8	
7					



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

3.8 Program status

DISPLAY	Program status
--	PFA switched off
Pr	Programming mode
00	(blinking dots) Manual mode
OP	Normal operation
PB	Profibus fault

3.9 Fault signalling

Fault message (blinking)	DISPLAY
Bus fault	Pb
Undervoltage in power pack	32
Bus module fault	bE

In manual mode, two dots blink on the display.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

3.10 Connection diagrams

3.10.1 PFA 700 and BGT SA-9U/1DP700

For the explanation of symbols, see page 26 (Legend).

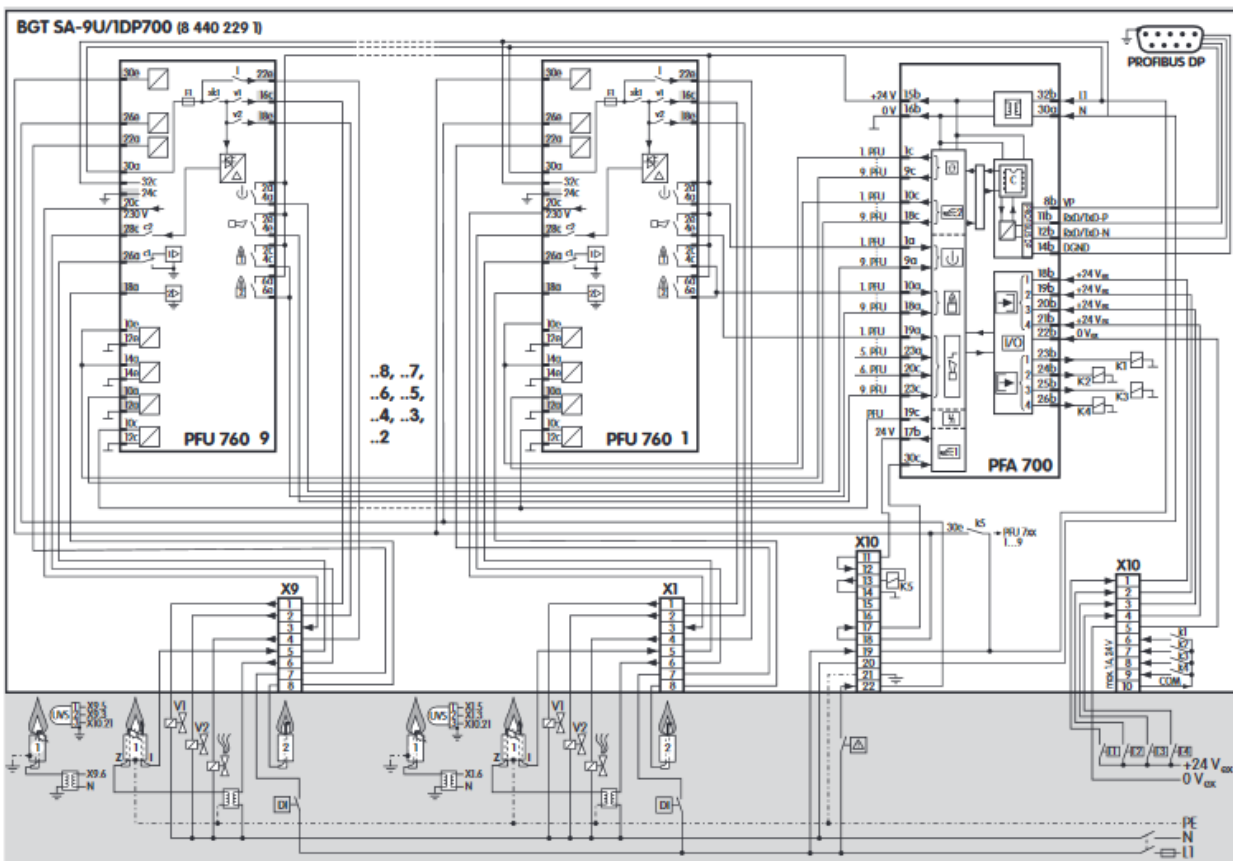



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

3.10.2 PFA 710 and BGT SA-8U/1DP

For the explanation of symbols, see page 26 (Legend)

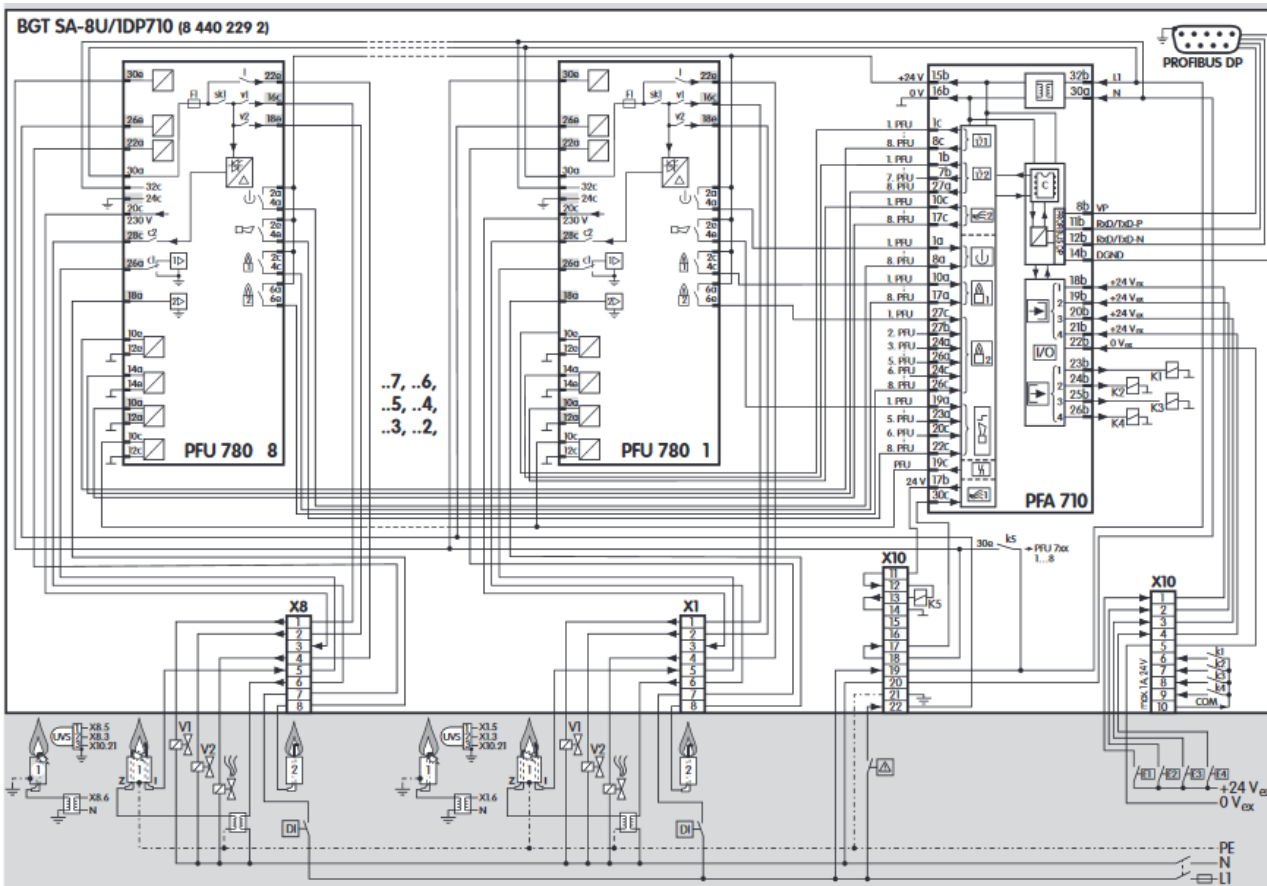



บริษัท เอดีดี เฟอร์เนส จำกัด


ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

3.10.3 Flame control using an electrode

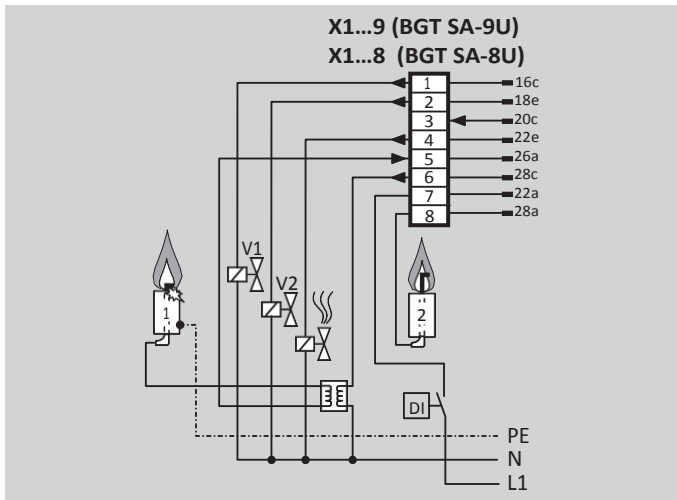

3.10.5 Flame control with UV sensor for continuous operation UVD 1

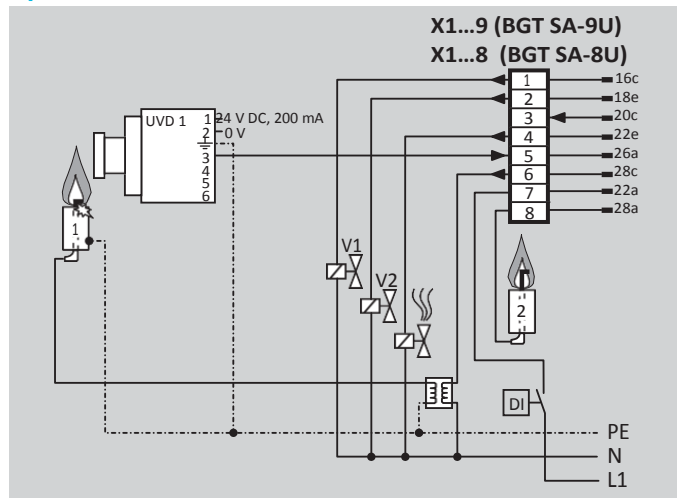



บริษัท เอดีดี เฟอร์เนส จำกัด


ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

3.10.4 Flame control with UV sensor UVS

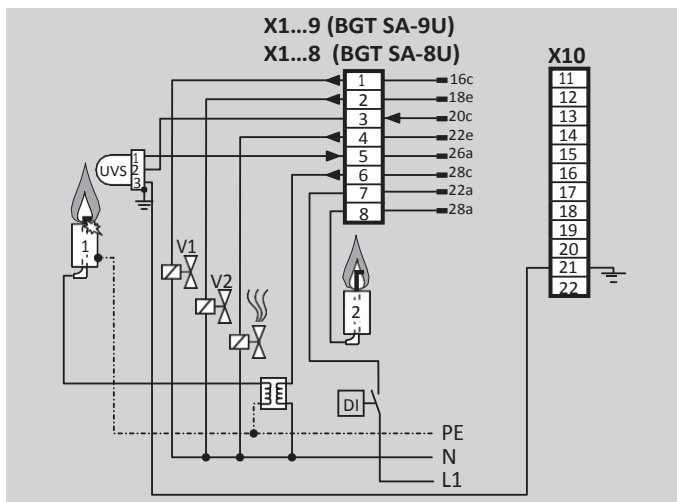



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

4 Parameters

Description	Parameter	Value range	Factory default setting	Adjustable*
Manual mode limited to 5 minutes	34	0; 1	1	
Manual operating mode	43	1; 2; 3; 4	1	
Last fault	81	Pb; 32; bE*	–	–
Second to last occurring fault	82	Pb; 32; bE*	–	–
Third to last occurring fault	83	Pb; 32; bE*	–	–
Fourth to last occurring fault	84	Pb; 32; bE*	–	–
Fifth to last occurring fault	85	Pb; 32; bE*	–	–
Sixth to last occurring fault	86	Pb; 32; bE*	–	–
Seventh to last occurring fault	87	Pb; 32; bE*	–	–
Eighth to last occurring fault	88	Pb; 32; bE*	–	–
Ninth to last occurring fault	89	Pb; 32; bE*	–	–
Tenth to last occurring fault	90	Pb; 32; bE*	–	–

* Fault messages appear in the display, see page 12 (Fault signalling).



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

4.1 Scanning the parameters

During operation, the 7-segment display shows the program status.

The individual parameters of the PFA can be called up on the display by repeatedly pressing the Reset/Information button (for 2 seconds).

In the event of a fault, the PFA halts the program run, the display blinks and it then displays the cause of the fault in coded form.

The PFA indicates “—” when the mains switch has been switched off. This signals standby mode. The bus interface is still operational to maintain the function of the communication system.


4.2 Changing parameters

The PFA is protected by a password to prevent unauthorized changes to the parameter settings. After entering the password, the parameter settings can be modified. Be aware of possible effects on the safe functioning of the system. The factory default password is 1234.

4.3 Manual operation

The PFA can be started in manual mode for burner adjustment or for fault-finding.

When switching on, press the Reset/Information button until the unit reverts to manual mode. Two dots blink on the display. In this operating mode, the burner control unit operates independently of the status of the bus and the inputs (apart from the pre-purge input and the safety interlocks).

In the factory default setting, manual mode is limited to 5 minutes (parameter 34 = 1). During this time, the burner can be adjusted, for example. If parameter 34 is set to 0, the time limitation will be removed. Emergency operation is now possible, for example in the event of a lengthy bus fault. (In the event of a bus fault,  will blink on the display).

Using the opto-adapter and the BCSoft software (see page 23 (Opto-adapter and BCSoft)), the operating mode parameters for manual mode can be changed. On parameterization, ensure that the program sequence matches the application. Select the parameters so that the burner can be operated as intended in all operating phases.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

4.3.1 PFA 700

Default operating mode parameters

Parameter 43 = 1

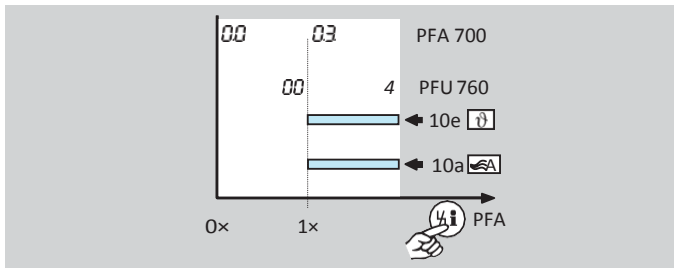


The PFA 700 is programmed at the factory so that voltage is applied to all burner control units PFU for the start-up signal of all burners and the external air valve control.

Adjusted operating mode parameters


Parameter 43 = 2

PFA 700 with PFU 760, ON/OFF operating mode – example of application, see page 5 (PFA 700 with PFU 760, staged On/ Off burner control).5 (PFA 700 with PFU 760, staged On/Off burner control)

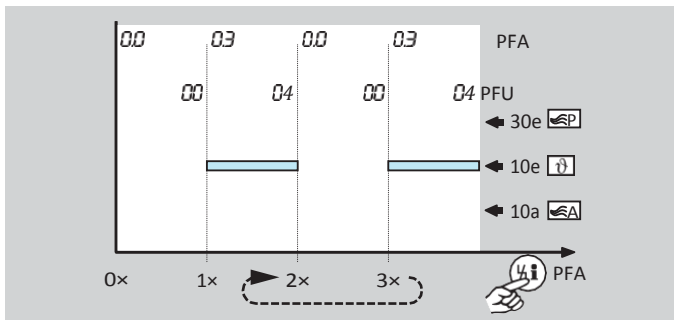


Parameter 43 = 3

PFA 700 with PFU 760L, ON/OFF operating mode – example of application, see page 5 (PFA 700 with PFU 760, staged On/ Off burner control).

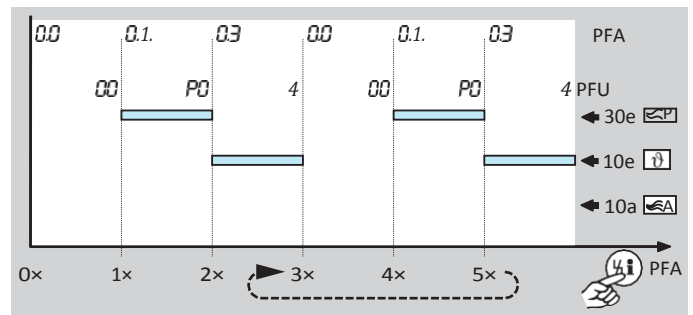

Parameter 43 = 4

PFA 700 with PFU 760L, High/Low operating mode – example of application, see page 6 (PFA 710 with PFU 780, stage-controlled main burner with alternating pilot burner)

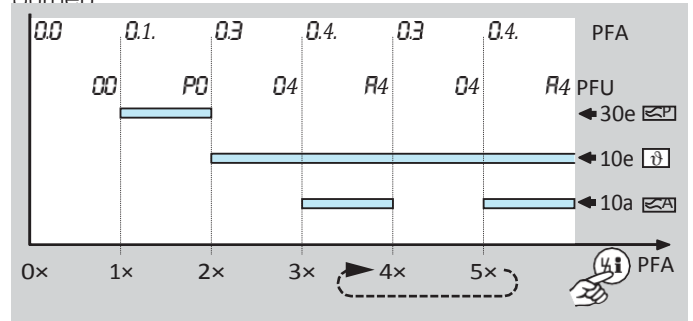



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

4.3.2 PFA 710

Default operating mode parameters

Parameter 43 = 1

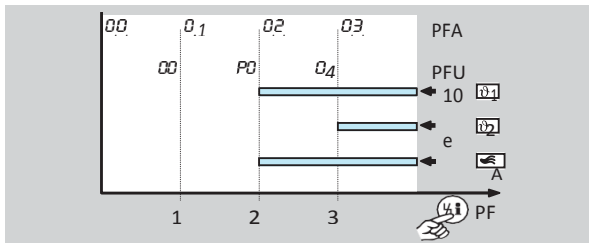


The PFA 710 is programmed at the factory so that voltage is applied to all burner control units PFU for the start-up signal of all burners and the external air valve control.

Adjusted operating parameters


Parameter 43 = 3

PFA 710 with PFU 780L, ON/OFF operating mode – example of application, see page 6 (PFA 710 with PFU 780, stage-controlled main burner with permanent pilot burner).

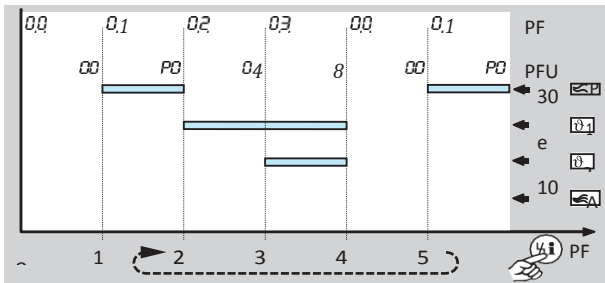

Parameter 43 = 4

PFA 710 with PFU 780L, High/Low operating mode – example of application, see page 6 (PFA 710 with PFU 780, stage-controlled main burner with permanent pilot burner).

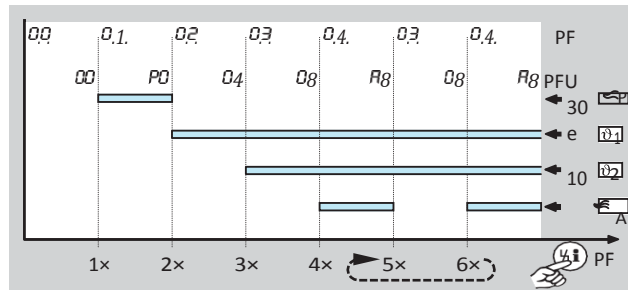



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

5 Selection

5.1 PFA

5.1.1 Selection table

Type	700	710	T	N	Z*
PFA	●	●	●	●	○

* If "none", this specification is omitted.
= standard, = available

Order example

PFA 700T

5.1.2 Type code

Code	Description
PFA	Field bus interface
700	For connecting: PFU 760
710	PFU 780
T	Mains voltage: 220/240 V AC
N	110/120 V AC
Z*	Special version

* If "none", this specification is omitted.

5.2 BGT

5.2.1 Selection table

Type	SA	-8U	-9U	/1DP700	/1DP710
BGT	●	●	●	●1)	●2)

1) Only in conjunction with -9U.

2) Only in conjunction with -8U.

Order example

BGT SA-8U/1DP710

5.2.2 Type code

Code	Description
BGT	9" module subrack
SA	Standard and PFA 700/PFA 710
-8U	Slots for: 8 PFU
-9U	9 PFU
/1DP700	1 PFA 700, PROFIBUS DP bus interface
/1DP710	1 PFA 710, PROFIBUS DP bus interface



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

6 Project planning information


6.1 Installation

The BGT can be installed in any position.

Install in clean environment ensuring enclosure IP 54 or higher,

whereby no condensation is permitted.

It must be ensured that the module subrack is well ventilated, in order to avoid overheating.

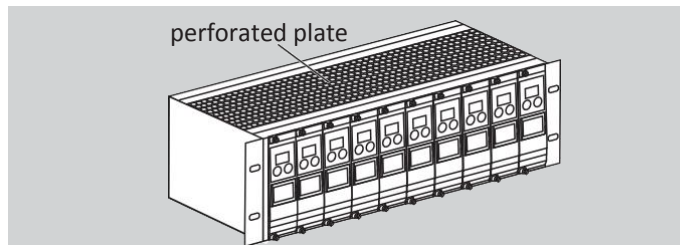

In the case of several module subracks mounted on top of one another, we recommend removing the perforated plates from between the module subracks, and inserting a rack-mounted fan underneath the module subracks.

6.2 Old-new PFA exchange

When exchanging the old PFA 700 (Order No. 8 439 510 0) for the new PFA 700, the mains voltage on the new units must be selected in accordance with the application requirements:

Old PFA 700		New PFA 700	
Mains voltage	Order No.	Mains voltage	Order No.
110 – 240 V	8 439 510 0	110/120 V AC	8 439 510 2
AC		220/240 V AC	8 439 510 1

A PROFIBUS plug connector with an internal additional EMC protective circuit will be delivered with the new PFA 700 when ordered as a replacement for the old PFA 700. If the new PFA is operated in an old module subrack with the Order No. 8 440 228 3, this plug connector must be installed (see page 22 (Wiring) and page 23 (Accessories)).



Project planning information

6.3 Wiring

Integrate module subracks BGT in the equipotential bonding system.

6.3.1 Safety-related control signals

Signals from the safety interlocks and digital input are transferred independently of the bus communication by separate cables.


The purge signals can be transferred via the bus communication or by a separate cable.

6.3.2 EMC

To achieve a high immunity of the system against electromagnetic interference radiation, a shielded data cable must be used. The shield must be connected to protective earth on both sides using wide-area shield clips that ensure good conductivity.

In addition, it must be ensured that all cables leading to and from the PFA be installed as far away as possible from cables emitting strong fields (e.g. frequency converter cables).

6.3.3 PROFIBUS plug connector

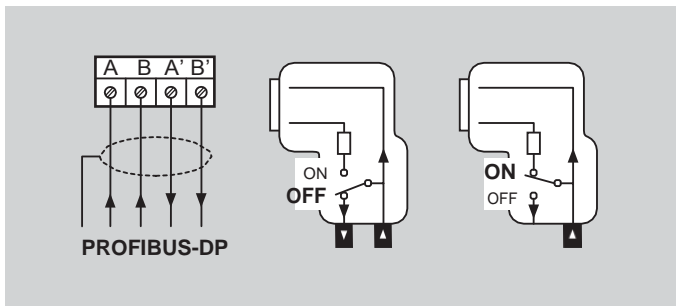

The power supply for the bus terminator is provided by the PFA. The bus terminator can be connected in the PROFIBUS plug connector.

Ensure an equipotential bond between the different slaves and masters.

Bibliography

- PROFIBUS Specification, EN 50170 Vol. 2 (version 1.0).
- Installation Guideline for PROFIBUS DP/FMS, available from the Profibus User Organization (PUO).
- PROFIBUS Technology and Application, Order No.: 4.001, available from the PUO.
- M. Popp, The New Rapid Way to PROFIBUS DP, a textbook for system operators.
- M. Popp, PROFIBUS DP Principles, Tips and Tricks for Users.
- www.profibus.com

6.4 Manual operation

For emergency operation, the time-limited manual mode can be deactivated.

The PFA is delivered with manual mode pre-set to a time limit (parameter 34 = 1).



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

7 Accessories

7.1 PROFIBUS plug



To replace existing PROFIBUS plug connectors, if a new PFA 700 is operated in an old module subrack with the Order No. 8 440 228 3, to improve EMC.

With shielding capacitor,
Order No.: 74960621

CD with device master data files for PFA PROFIBUS DP,
Order No. 74960460, or at www.docuthek.com


7.2 Opto-adapter and BCSoft



Opto-adapter including BCSoft CD-ROM,
Order No.: 74960437.

The current software can be downloaded from our Internet site at www.docuthek.com. To do so, you need to register in the DOCUTHEK.

7.3 “Changed parameters” stickers

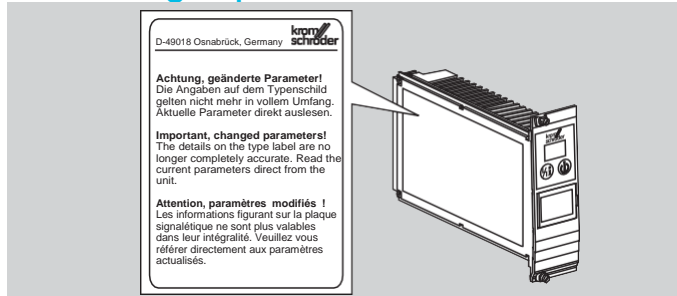

Affix on the PFA if parameters set at the factory have been changed.

100 s, Order No.: 74921492.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

8 Technical data

8.1 PFA 700, PFA 710

Front width 8 depth units = 40.6 mm.

Overall height 3 height units = 128.4 mm.

Ambient temperature: -20°C to +60°C.

4 digital inputs: 24 V DC, $\pm 10\%$, < 10 mA.

4 digital outputs for controlling small relays 24 V, max.

250 mW (100 mA).

Mains voltage:


220/240 V AC, -15/+10%, 50/60 Hz,

110/120 V AC, -15/+10%, 50/60 Hz,

for grounded and ungrounded mains.

Weight: approx. 0.75 kg.

8.1.1 Operating controls

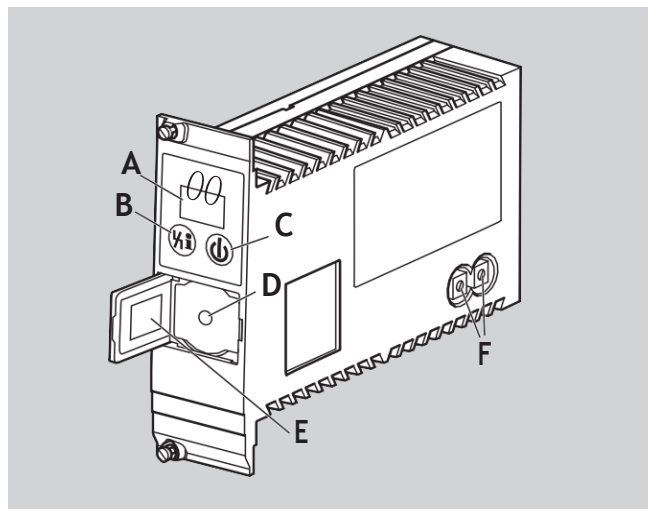

A: 2-digit 7-segment display.

B: Reset/Information button to reset the system after a fault or to scan parameters on the display.

C: Mains switch.

D: Optical interface.

E: Type label.

F: Code switches.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

8.2 BGT

Weight: 2.3 kg.

8.2.1 Dimensions

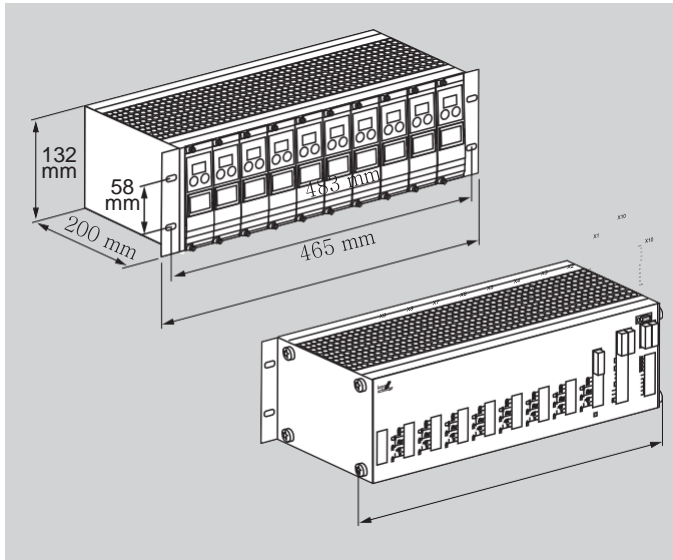



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

9 Legend

88 Display

 Ready for operation

Safety interlocks

 Burner start-up signal

 Digital input

 Ignition transformer

Gas valve

 Air valve

P Purge

 
 External air valve control

Flame signal

 Burner operating signal

 Operating signal, pilot burner


 Operating signal, main

 burner Fault signal

 Reset

Input signal

 Output signal

 Input/Output safety circuit