บริษัท เอดีดี เพอร์เนส จำกัด 44 ช.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170 website: https://www.add-furpace.com/ โทร-02-888-34 website: https://www.add-furnace.com/ โทร:02-888-3472 Add Furnace Co.,Ltd. Line ID: @add11 Wechat ID: add0883001122



KOMPACT Control Systems



TGRD7x and **TGRD9**x **Types Oil burner controls**

MAIN FEATURES

- Program versions for forced draft oil burners and air heaters
- TGRD versions available with postpurge function available
- Multicolor indications of operating status and fault status messages
- Controlled intermittent mode after 24 hours of continuous operation
- TGRD versions available with limitation function of the number of repetitions
- External reset facility
- TGRD versions available with preheater supervision with timer
- TGRD versions suitable for EN267 applications
- Approval based on latest European Directive EN298:2012 and UL 372 / CSA C22.2 No. 199

TGRD burner controls ensure reliable operation and supervision of 1-2 or 3-stage oil burners. The products have the same reliability of analogue versions (Kompact TGR) and a high level of safety while offering ease of operation.

Burner controls of the TGRD line feature are equipped with a single-channel microprocessor system with periodic self-check and 2 independent shutdown paths for safety-related functions. The controls are also suitable for driving air dampers by means of 1 or 2 wires of a modulating thermostat. For flame supervision, the photosensors FC... and FT... are used for yellow flame and the flame d etector FD... for blue flame.

Technical data (extract)

For further information see data sheets 14540.

Mains voltage:		200÷240V ~ +10% / -15% @ 50/60Hz
	On request:	100÷120V ~ +10% / -15% @ 50/60Hz
Operating temperature range: Ambient humidity:		-20°C ÷ +70°C 95% max @ 40°C
Protection degree (with connecting socket):		IP 00
Maximum cables length: - Thermostat (T) and external reset (RE):		20 m
- external components:		<u>1 m</u>

บริษัท เอดีดี เฟอร์เนส จำกัด 44 ซ.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170 Add Furnace Co.,Ltd. website: https://www.add-turnace.com/ imstu

Standards and certificates (extract)

F Conformity to EC directives

· Electromagnetic compatibility

- EMC (immunity) 2014/30/EU
- Low-voltage directive 2014/35/EU



Conformity to UL directives

- UL 372 and CSA C22.2 No. 199
- File No. MH46742



Types reference (extract)


The type reference applies to the TGRD burner control without flame detector. The operating cycle and timers are set on request, further information see data sheets 14540.

website: https://www.add-furnace.com/ ins:02-888-3472

	Fuel Valve stages	capacity	Without Running Pre-heater check		External Reset		TP min.	TS max.	Tj min.	Tdk max.
Standard ver	rsions									
TGRD71	V 1	< 30 kg/h				2 s	10 s	5 s	10 s	4 s
TGRD91	V 1	< 30 kg/h				2 s	20 s	5 s	10 s	
opt. GZ		-								
TGRD92	V 2	30 kg/h				2 s	20 s	5 s	20 s	2 s
TGRD93	V 3	100 kg/h				2 s	20 s	5 s	20 s	2 s
opt. MJ7 W9										
Version for	flash-steam	generators								
TGRD72	V 2	< 30 kg/h				2 s	1,5 s	10 s	1,5 s	10 s
) Remark: Suited for warm air generators (WLE)										

Main options				
opt.Vn	Limitation of repetitions	If the flame is lost during operation, a maximum of 'n' repetitions can be made. If the flame is lost for the 'n+1' time during operation, the burner will initiate lockout. The repetition count is restarted each time with the start-up of the working cycle by heat request «T».		
opt.PTnn	post-purge function	'nn' seconds of post-purge that it can be interrupted by the heating demand to service the new working cycle.		
opt. Pnn	post-purge function	'nn' seconds of post-purge that it cannot be interrupted by the heating demand to service the new working cycle.		
opt.Qnnn	preheater supervision	If the oil preheater's release contact does not close within 'nnn' seconds, the burner control will initiate lockout		

Overview of the system with TGRD burner control

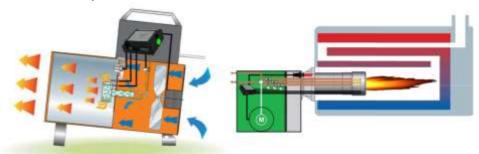

Diagnostic possibilities of the TGRD burner controls

Table of colour codes for multi-coloured signal lamp				
Multicolour Code	Status			
Continuously off	Waiting heat request			
hhhhhhhhhhhhhhhhhhh				
Green Continuously on	All OK.			
hhhhhhhhhhhhhhhhhhh	All OK.			
Orange Continuously on				
hhhhhhhhhhhhhhhhhhh	Ignitor On			
Flashing Green				
hhhhhhhhhhhhhhhhhhhhhh	Low/bad flame signal during operation			
Flashing Orange				
5 5	Good flame signal during ignition			
hhhhhhhhhhhhhhhhhhh				
Green/Orange	Low/bad flame signal during ignition			
հեհեհեհեհեհեհեհեհեհե				
Red/Orange				
իրիրիրիրիրիրիրիրիրու հերություններություններություններություններություններություններություններություններություն	Under/Over voltage detect			
Blinking Red(*)	Diagnostics (press 5 s reset button) or extraneous light on			
hhhhhhhhhhhhhhhhhhhhhhhh	burner startup			
Red Continuously on	burner startup			
Neu Continuousiy on	Lockout alarm			
hhhhhhhhhhhhhhhhhhh	Lockout diarm			

	No establishment of flame at the end of TS		
* Table of error code messages			
(lockout diagnostic enabled by on- board button)	Supervision of Preheater thermostat, timeout (only versions with Qnn option)		
Red Blinking Codes	Description possible cause flame on burner startup		
2 switch off every 2 seconds	(only versions with Knn option)		
hhhhhhhhhhhhhhhhhhh	too many losses of flame during operation		
3 switch off every 2 seconds	(only versions with Vnn option)		
hhhhhhhhhhhhhhhhhhh	Wiring error or internal error, miscellaneous errors		
4 switch off every 2 seconds			
hhhhhhhhhhhhhhhhhhh			
7 switch off every 2 seconds			
hhhhhhhhhhhhhhhhhhh			
8-14 switch off every 2 seconds			