




How to set azbil SDC36 input type

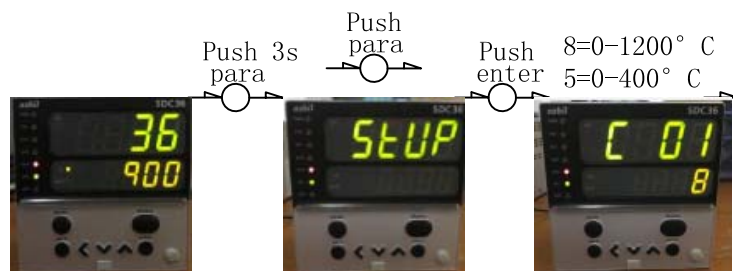


How to set azbil SDC36 Event1(Alarm Type:PV High, Code:E1.C1=1) Event NO to NC When power default ON, Code:E1.C2=0001

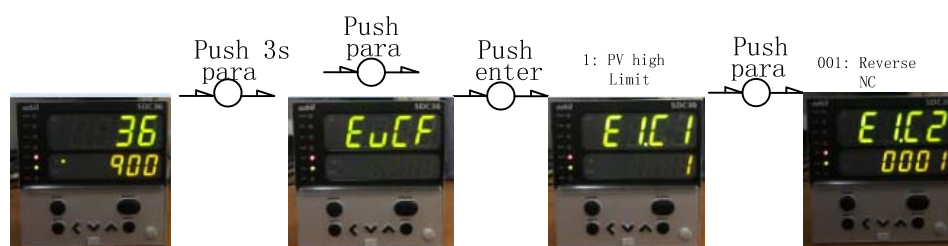

How to set azbil SDC36 Event1(Alarm) Limit Temp to set(Example 900° C to 902° C) then -5° C (902° C-5° C=897° C) work

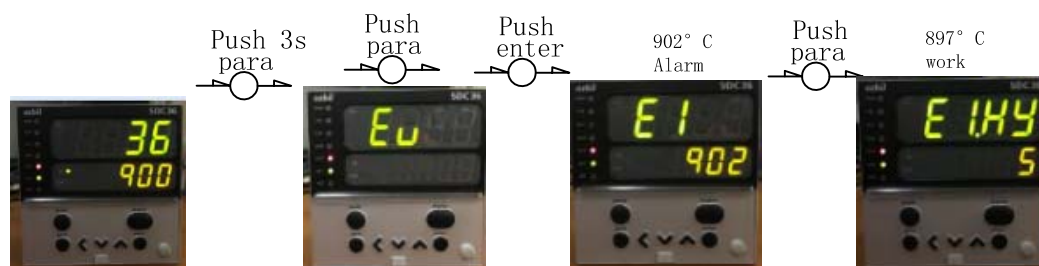

How to set azbil SDC36 Manual output

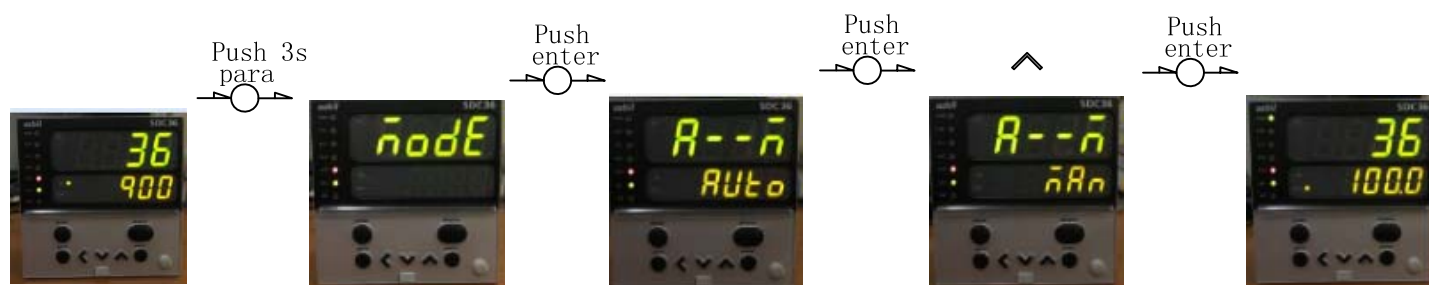

Itemref	Quantity	Title/Name, designation, material, dimension etc		Article No./Reference	
Designed by XXX	Checked by XXX	Approved by - date XXX - 00/00/00	File name xxx	TITLE Electric Test Furnace	



บริษัท เอ็ดดี เฟอร์เนส จำกัด
ADD FURNACE CO.,LTD.
https://www.add-furnace.com sales@add-furnace.com
Tel:02-888-3472 Fax:02-888-3258

xxx	xxx	xxx	xxx
Scale(A4) 1:x	Edition 0	Sheet 1/1	View(Third) ☐