



บริษัท เอดดี เพอร์เฟส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนบราวน์ราชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออฟฟิต: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Pressure switch for gas DG



Technical Information · GB

4 Edition 08.13



- Monitoring of gas and air pressures (positive, negative and differential pressures)
- EC type-tested and certified pursuant to EN 1854 and class "S"
- DG..T: FM approved and UL listed
- Certified pursuant to GOST-R and AGA
- Certified for systems up to SIL 3 and PL e
- Pressure switch with internal lock and manual reset
- Suitable for biologically produced methane (can be used on pipes with Zone 2 explosive atmospheres without isolating amplifier)
- With approved isolating amplifier for Zone 1 and 2 hazardous areas
- RoHS 2002/95/EC
- DG..S: special version available for NH₃ and O₂



krom//schroder



Contents

Pressure switch for gas DG	1
Contents	2
1 Application	4
1.1 Examples of application.....	5
1.1.1 Gas deficiency monitoring.....	5
1.1.2 Differential pressure monitoring	5
1.1.3 Systems leak tightness check.....	5
1.1.4 Negative pressure monitoring.....	5
1.1.5 Air line with minimum pressure and flow monitoring	6
1.1.6 Low-pressure cut-off and high gas pressure protection device.....	6
2 Certification	7
2.1 Overview.....	8
3 Function	9
3.1 Positive pressure measurement.....	9
3.2 Negative pressure measurement	9
3.3 Differential pressure measurement.....	9
3.4 Connection diagram.....	10
3.4.1 Blue pilot lamp for 230 V AC or for 120 V AC	10
3.4.2 Pilot lamp with plug.....	10
3.4.3 Red/green pilot LED for 24 V DC/AC or for 230 V AC	10
3.4.4 Pilot LED with plug	10
3.5 Wiring.....	11
3.6 DG in Zone 1 (21) and 2 (22) hazardous areas	12
3.7 DG on pipes with Zone 2 (22) explosive atmospheres....	13
3.8 Animation	14
4 Selection	15
4.1 Selection table	15
4.2 Type code	16
5 Project planning information	17
5.1 Installation	17
6 Accessories	19
6.1 Fastening set with screws, U-shape bracket.....	19
6.2 Connecting set	19
6.3 External adjustment	19
6.4 Pressure equalization element	19
6.5 Restrictor orifice.....	20
6.6 Test key PIA	20
6.7 Filter pad set	20
6.8 Tube set.....	20
6.9 Standard socket set	20
6.10 Standard coupler plug	20
6.11 Pilot lamp set, red or blue	21
6.12 LED set, red/green.....	21
7 Technical data	22
7.1 Adjusting range, switching hysteresis	23
7.2 Safety-specific characteristic values for DG.....	24
7.2.1 Determining the PFHD value, the λD value and the MTTFd value.....	25
7.2.2 Calculating the PFHD	25
7.3 Dimensions	26
8 Maintenance cycles	26
9 Glossary	27
9.1 Diagnostic coverage DC	27
9.2 Mode of operation	27
9.3 Category	27
9.4 Common cause failure CCF	27
9.5 Fraction of undetected common cause failures β	27
9.6 B10d value	27
9.7 T10d value	27
9.8 Hardware fault tolerance HFT	27
9.9 Mean dangerous failure rate λD	28
9.10 Safe failure fraction SFF.....	28
9.11 Probability of dangerous failure PFHD	28
9.12 Mean time to dangerous failure MTTFd	28



บริษัท ออดดี ไฟร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตย เขตวังทองหลาง กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroeder**

Application



DG..U-3

Adjustable switching point



DG..H, DG..N

DG..H: switches and locks off with rising pressure. DG..N: switches and locks off with falling pressure. Manual reset.



DG..-6

With fitted socket pursuant to DIN EN 175301-803



DG..T

Hand wheel with "WC and mbar scale. NPT conduit for electrical connection.

The gas pressure switch DG monitors extremely low pressure differentials and triggers switch-on, switch-off or switch-over operations if a set switching point is reached. The switching point is adjustable via a hand wheel.

It monitors positive and negative gas pressures on various industrial gas and air appliances, such as boiler fan monitoring and differential pressure monitoring in firing, ventilation and air-conditioning systems.

The TÜV-tested special-design pressure switch is used as defined by VdTÜV Code of Practice "Druck 100/1" (Pressure 100/1) in firing installations for steam and hot-water generators in accordance with TRD 604, Para. 3.6.4, as well as class "S" for DG..B, DG..U and DG..I pursuant to EN 1854.

Type	Positive pressure	Negative pressure	Differential pressure
DG..B	Gas, air, flue gas or biomethane	-	-
DG..U, DG..T	Gas, air, flue gas or biomethane	Air or flue gas	Air or flue gas
DG..H, DG..N, DG..HT, DG..NT	Gas, air, flue gas or biomethane	Air or flue gas	Air or flue gas
DG..I	Air or flue gas	Gas, air, flue gas or biomethane	Air or flue gas
DG..S	NH ₃ or O ₂	-	-



บริษัท ออดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตยเหนือ เขตวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Application


1.1 Examples of application

1.1.1 Gas deficiency monitoring




For monitoring the minimum gas inlet pressure

1.1.2 Differential pressure monitoring

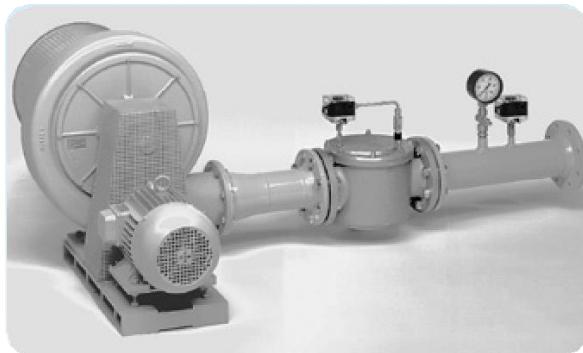

Differential pressure switch for monitoring air filters

1.1.3 Systems leak tightness check

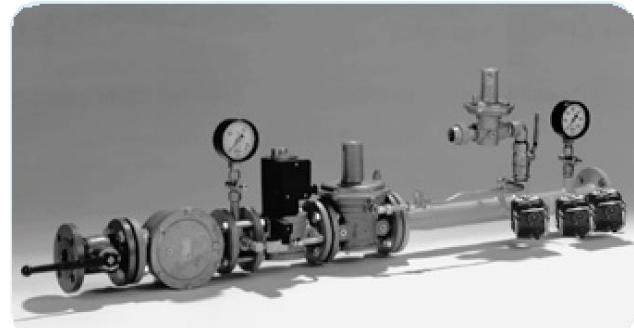

Electronic safety shut-off valve SAV with closed position check of downstream devices.

1.1.4 Negative pressure monitoring




Monitoring the negative pressure ensures the correct positioning of the components during fully automatic assembly of gas meters.



Application > Examples of application

1.1.5 Air line with minimum pressure and flow monitoring

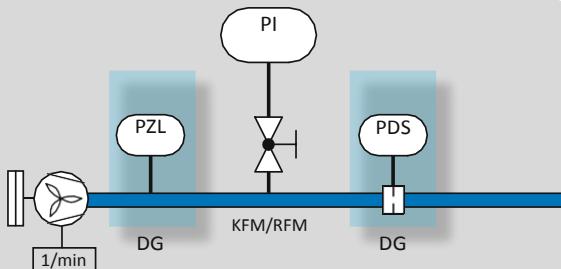


The air flow generated by the fan may be monitored as follows:

The static pressure is monitored by pressure switch DG (PZL), as long as it can be demonstrated that the display consequently shows an adequate and secured flow of air, or

The pressure switch DG (PDS) controls the flow of air via the differential pressure on the orifice.

If there is no air pressure supplied or if there is no differential pressure on the orifice, the system will be blocked.

1.1.6 Low-pressure cut-off and high gas pressure protection device

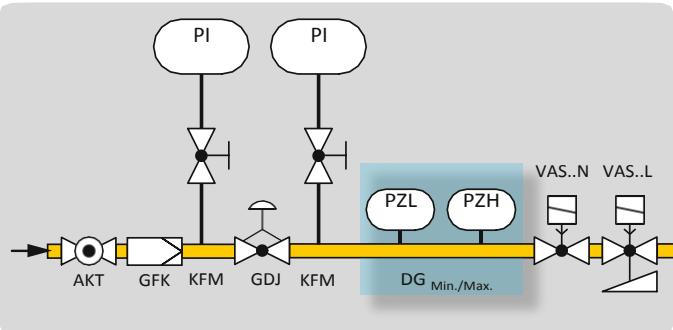

If the pressure is either too low or too high, the min./max. pressure switch DG (PZL/PZH) switches in order to avoid start-up or to initiate a safety shut-down.



บริษัท เอดดี ฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคเมบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com



1 Certification

SIL and PL certified*



For systems up to SIL 3 pursuant to EN 61508 and PL e pursuant to ISO 13849

EC type-tested and certified*



pursuant to

- Gas Appliances Directive (2009/142/EC) in conjunction with EN 1854, Class "S"
- Meets the requirements of the
- Low Voltage Directive (2006/95/EC)
- Declaration of conformity (D, GB) – see www.docuthek.com → Elster Kromschröder → Kromschröder, LBE → Products → 04 Pressure switches → Pressure switches for gas DG → Kind of document: Certificate → DG (K OS Konformitätserklärung)
- AGA approval*



Australian Gas Association, Approval No.: 5484
http://www.agaa.org.au/product_directory

Approval for Russia*



Certified by Gosstandart pursuant to GOST-R. Approved by Rostekhnadzor (RTN).

Scan of the approval for Russia (RUS) – see www.docuthek.com → Elster Kromschröder → Kromschröder, LBE → Products → 04 Pressure switches → Pressure switches for gas DG → Kind of document: Certificate → DG B12185 (nationales Zertifikat Russland) (RUS)

DG . .T: FM approval*



Factory Mutual Research Class: 3510 Flow and pressure safety switches.

Designed for applications pursuant to NFPA 85 and NFPA 86.
www.approvalguide.com

DG . .T: UL approval*



UL 353 Limit control.

Underwriters Laboratories – www.ul.com → Certification.

* Approval does not apply to DG..S. DG..S complies with the requirements of the Low Voltage Directive (2006/95/EC).



บริษัท ออดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนบรมราชชนนี แขวงคลองเตยรัมสพัน เขตวิภาวดี กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Certification

2.1 Overview

	DG.B, DG.U, DG.H, DG.N, DG.I	DG.T	DG.S
SIL PL	●	-	-
CE 2006/95/EC	●	-	●
CE 2009/142/EC EN 1854	●	-	-
	●	-	-
PC	●	-	-
	-	●	-
C UL US LISTED	-	●	-



บริษัท ออดีดี้ เฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตยเหนือ กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258


<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

2 Function

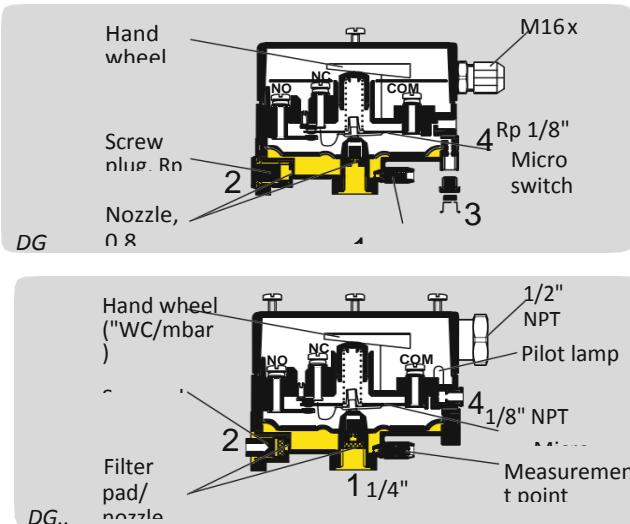

 The pressure switch DG switches in the event of increasing or decreasing pressure. Once the set switching point is reached, a micro switch is activated in the DG which is designed as a change-over contact.



The switching pressure is adjusted using a hand wheel.

3.1 Positive pressure measurement

Positive pressure measurement is designed, for example, for checking the fan function or measuring the min./max. gas pressure.

The positive pressure is measured in the lower diaphragm chamber, port 1 or 2.

The upper diaphragm chamber is ventilated via port 3 or 4.

3.2 Negative pressure measurement

Negative pressure measurement (air, flue gas) is designed, for example, for monitoring a suction pressure blower. The negative pressure is measured in the upper diaphragm chamber, port 3 or 4, and on DG..T via port 4. The lower diaphragm chamber is ventilated via port 1 or 2.

In the case of DG..I, the negative pressure (gas, air, flue gas or biologically produced methane) is measured in the lower diaphragm chamber, port 1 or 2. The upper diaphragm chamber is ventilated via port 3 or 4.

3.3 Differential pressure measurement

Differential pressure measurement is designed for instance for safeguarding an air flow rate or for monitoring filters and fans.

DG..U, DG..H, DG..N: the higher absolute pressure is connected to port 1 or 2, and the lower absolute pressure to port 3 or 4. The remaining ports must be tightly plugged.



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออคเเบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

krom
schroeder

Function

3.4 Connection diagram

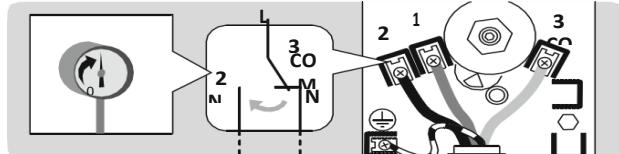



Contacts 3 and 2 close when subject to increasing pressure. Contacts 1 and 3 close when subject to falling pressure.

All DG models (except DG..N) switch with rising pressure. The contact switches from NC 1 to NO 2.


DG..N switches with falling pressure. The contact switches from NO 2 to NC 1.

DG..H and DG..N are locked off in their switched state and can only be unlocked with a manual reset.


3.4.1 Blue pilot lamp for 230 V AC or for 120 V AC

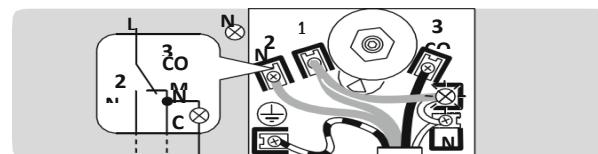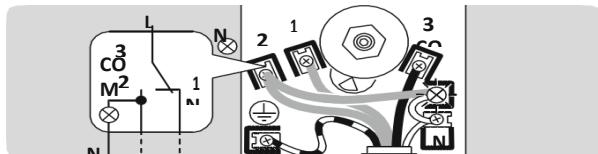


3.4.2 Pilot lamp with plug

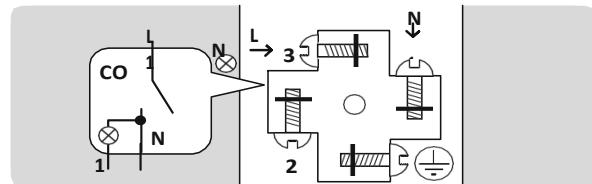

3.4.3 Red/green pilot LED for 24 V DC/AC or for 230 V AC

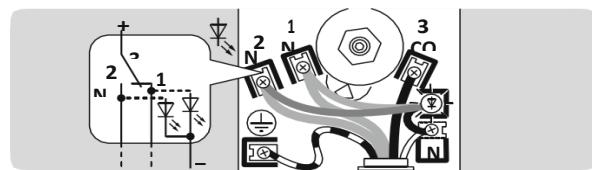

3.4.4 Pilot LED with plug

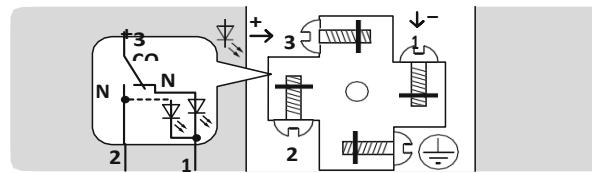



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com


**krom
schroder**

Function

3.5 Wiring


If the DG..G has switched a voltage > 24 V and a current > 0.1 A at $\cos \varphi = 1$ or > 0.05 A at $\cos \varphi = 0.6$ once, the gold plating on the contacts will have been burnt through. It can then only be operated at this power rating or higher power rating.

When using silicone tubes, only use silicone tubes which have been sufficiently cured. Vapours containing silicone can adversely affect the functioning of electrical contacts. In the case of low switching capacities, such as 24 V, 8 mA, for example, we recommend using an RC module (22Ω , $1 \mu\text{F}$) in air containing silicone or oil.

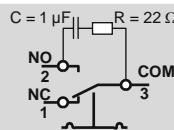


In the case of high humidity or aggressive gas components (H₂S), we recommend using a pressure switch with gold contact due to its higher resistance to corrosion. Closed-circuit current monitoring is recommended under difficult operating conditions.

 All DG models (except DG .I)



Contacts 3 and 2 close when subject to increasing pressure. Contacts 1 and 3 close when subject to falling pressure.


DG 18I, DG 120I, DG 450I

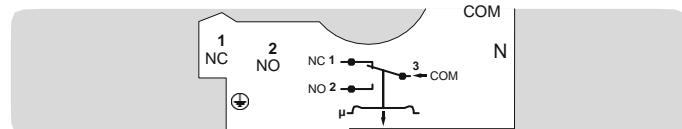


Contacts 3 and 2 close when subject to increasing negative pressure. Contacts 1 and 3 close when subject to falling negative pressure.

DG 1,5I and DG 12I

The connection of DG 1,5I and DG 12I depends on the positive or negative adjusting range.

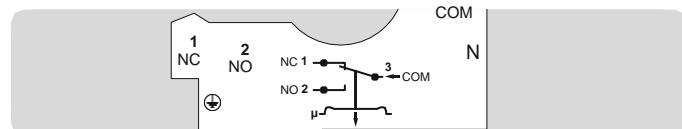

 In the positive adjusting range, remove the template and wire the unit as shown in the engraved connection diagram.





บริษัท ออดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตย เขตวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroeder**

Function

3.6 DG in Zone 1 (21) and 2 (22) hazardous areas

Pressure switch DG can be used in Zone 1 (21) and 2 (22) hazardous areas if an isolating amplifier is installed upstream in the safe area as "Ex-i" equipment pursuant to EN 60079-11 (VDE 0170-7):2007.


DG as "simple electrical equipment" pursuant to EN 60079-11:2007 corresponds to the Temperature class T6, Group II. The internal inductance/capacitance is $Lo = 0.2 \mu\text{H}/Co = 8 \text{ pF}$.

The isolating amplifier transfers the DG's signals from the explosion-hazard area to the safe area. Depending on the design of the intrinsically safe circuit, the explosion-hazard area can be monitored for cable faults, cable breaks or short-circuits.


Ensure that standard-compliant wiring pursuant to EN 60079 is used.

When operating in Zones 21 and 22, the 1/8" connecting thread or the tube connection for the surrounding air or medium connection must be protected from dirt particles by a separate filter.


Intrinsically safe circuit without monitoring for cable faults

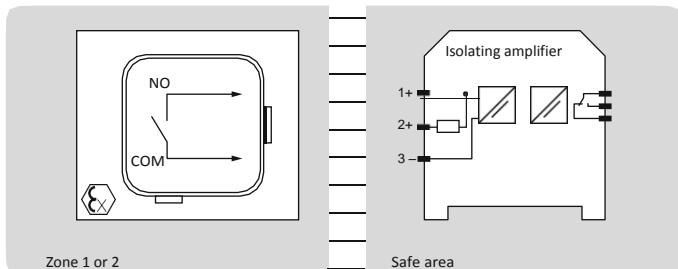

Intrinsically safe circuit with monitoring for cable breaks

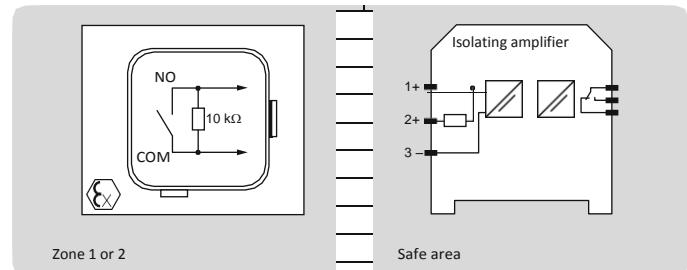

Intrinsically safe circuit with monitoring for cable faults and short-circuits

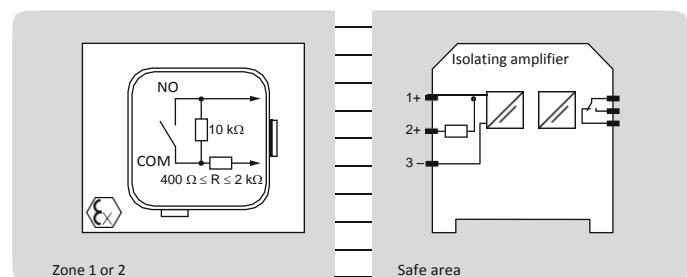



บริษัท ออดดี ไฟร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Function

3.7 DG on pipes with Zone 2 (22) explosive atmospheres

Pressure switch DG can be connected to pipes/rooms in which Zone 2 (22) explosive gases or dust are present without an isolating amplifier.

The connection to Zone 2, Zone 22 must be implemented via one of the two $\frac{1}{4}$ " threads. Even in the unlikely event of a break in the diaphragm, there is no danger of flashback into the system. The pressure compensation holes on the pressure switch ($\frac{1}{4}$ " connections) have a defined ignition protection, in terms of the safety measure for "enclosed-break devices for Group IIA gases and vapours", pursuant to IEC/EN 60079-15:2005.

In the case of Zone 22, it must be ensured that dirt particles do not block the pressure supply hole ($\varnothing = 0.8$ mm).



บริษัท ออดดี ไฟร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตย เขตวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258


<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Function

inter
active

krom
schroder

3.8 Animation

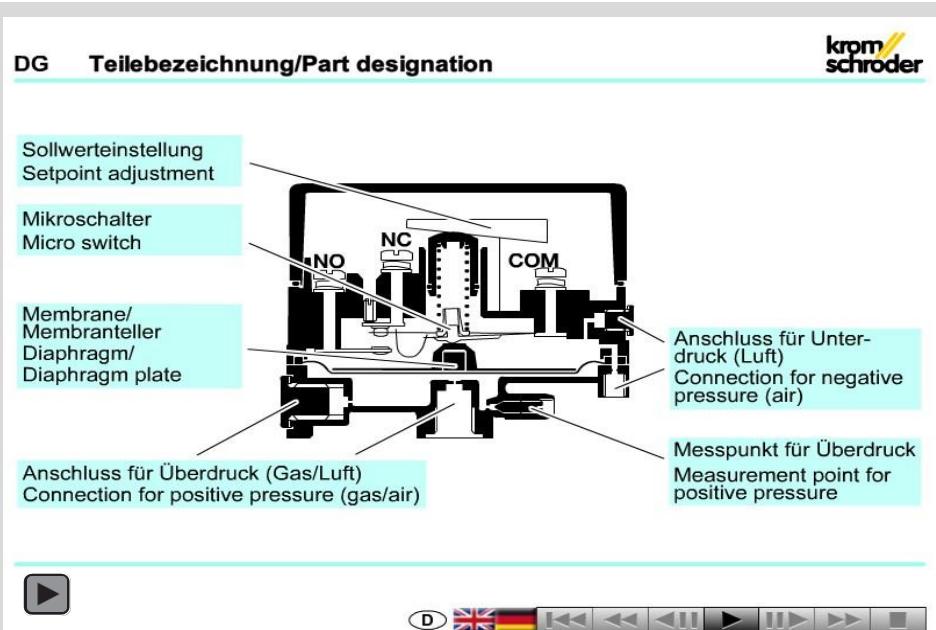

The interactive animation shows the function of the gas pressure switch DG.

Click on the picture. The animation can be controlled using the control bar at the bottom of the window (as on a DVD player). To play the animation, you will need Adobe Reader 7 or a newer version. If you do not have Adobe Reader on your system, you can download it from the Internet.

Go to www.adobe.com, click on "Adobe Reader" in the "Download" section and follow the instructions.

If the animation does not start to play, you can download it from the document library (Docuthek) as an independent application.



บริษัท ออดดี ไฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตย เขตวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

4 Selection

4.1 Selection table

DG..B for positive pressure

DG..U for positive pressure, negative pressure and differential pressure

Type	6	10	30	50	150	400	500	B	U	G	-3	-4	-5	-6	-7	-8	-9	K2	T	T2	N	A
DG	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	○	○	○	○	○	○	○

Order example

DG 10UG-3K2

● = standard, ○ = available

DG..H, DG..N for positive pressure, negative pressure and differential pressure

DG..H locks off with rising pressure, DG..N locks off with falling pressure

Type	6	10	30	50	150	400	500	H	N	G	-3	-4	-5	-6	-7	-8	-9	K2	T	T2	N	A
DG	●	●	●	●	●	●	●	●	●	○	●	●	○	●	●	○	○	○	○	○	○	○

DG..S for positive pressure, for oxygen and ammonia (without approval)

Type	6	10	30	50	150	400	500	S	G	-3	-4	-5	-6	-7	-8	-9	K2	T	N	A	
DG	●	●	●	●	●	●	●	●	○	●	○	○	○	○	○	○	○	○	○	○	○

DG..I for negative pressure

Type	1,5	12	18	120	450	I	G	-3	-4	-5	-6	-7	-8	K2	T	N	A
DG	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	

DG..T for positive pressure, negative pressure and differential pressure, with NPT connection

Type	6	10	50	150	500	T*	G**	S
DG	●	●	●	●	●	●	●	○

DG..HT, DG..NT for positive pressure, negative pressure and differential pressure

DG..HT locks off with rising pressure, DG..NT locks off with falling pressure

Type	6	10	50	150	500	H	N	T*	G**	S
DG	●	●	●	●	●	●	●	●	●	○

*On DG..T, the blue pilot lamp for 120 V AC is fitted.

** On DG..TG, the red/green pilot LED for 24 V DC/AC is fitted.



บริษัท ออดีดี เฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนนบราวนราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Selection

krom
schroder

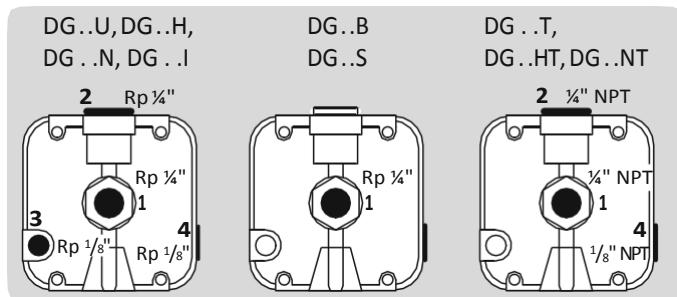

DG..U, DG..H, DG..N, DG..I:
ports 1 and 2: Rp $\frac{1}{4}$ " (standard),
ports 3 and 4: Rp $\frac{1}{8}$ " (standard).

DG..B, DG..S:
port 1: Rp $\frac{1}{4}$ " (standard).

DG..T, DG..HT, DG..NT:

port 1: $\frac{1}{4}$ " NPT (standard) or
ports 1 and 2: $\frac{1}{4}$ " NPT (available),
port 4: $\frac{1}{4}$ " NPT (standard).

4.2 Type code

Code	Description
DG	Pressure switch for gas
1,5	Negative pressure, adjusting range -1,5 to 0,5/+0,5 to +3 mbar
6	Adjusting range 0,4 to 6 mbar
10	Adjusting range 1 to 10 mbar
12	Negative pressure, adjusting range -12 to -1/+1 to +7 mbar
18	Negative pressure, Adjusting range -2 to -18 mbar
30	Adjusting range 2,5 to 30 mbar
50	Adjusting range 2,5 to 50 mbar
120	Negative pressure, adjusting range -10 to -120 mbar
150	Adjusting range 30 to 150 mbar
400	Adjusting range 50 to 400 mbar
450	Negative pressure, adjusting range -80 to -450 mbar
500	Adjusting range 100 to 500 mbar
B	Positive pressure
U	Positive pressure, negative pressure, differential pressure
H	Locks off with rising pressure
N	Locks off with falling pressure
I	Negative pressure for gas
S	Positive pressure only, for oxygen and ammonia
T	T-product
G	With gold-plated contacts
	Electrical connection:
-3	via screw terminals
-4	via screw terminals, IP 65
-5	via 4-pin plug, without socket
-6	via 4-pin plug, with socket
-9	via 4-pin plug, with socket, IP 65
K2	Red/green pilot LED for 24 V DC/AC
T	Blue pilot lamp for 230 V AC
T2	Red/green pilot LED for 230 V AC
N	Blue pilot lamp for 120 V AC
A	External adjustment

Adjusting range, see page 23 (Adjusting range, switching hysteresis)



5 Project planning information

5.1 Installation

Installation in the vertical or horizontal position, or sometimes upside down, preferably with vertical diaphragm.

If installed in a vertical position, the switching point p_s will correspond to the scale value SK set on the hand wheel. If installed in another position, the switching point p_s will change and no longer correspond to the scale value SK set on the hand wheel. Switching point p_s must be checked.



All DG models (except DG..I)

$p_s = SK$	$p_s = SK + 0.18 \text{ mbar}$	$p_s = SK - 0.18 \text{ mbar}$
------------	--------------------------------	--------------------------------

DG 1,5I

$p_s = SK$	$p_s = SK + 0.4 \text{ mbar}$ e.g. SK = 1.2: $p_s = 1.2 + 0.4 = 1.6 \text{ mbar}$ e.g. SK = -1.2: $p_s = -1.2 + 0.4 = -0.8 \text{ mbar}$	
------------	--	--

DG 12I

$p_s = SK$	$p_s = SK + 0.5 \text{ mbar}$ e.g. SK = 5: $p_s = 5 + 0.5 = 5.5 \text{ mbar}$ e.g. SK = -10: $p_s = -10 + 0.5 = -9.5 \text{ mbar}$	
------------	--	--


DG 18I, DG 120I, DG 450I

$p_s = SK$	DG 18I: $p_s = SK + 0.5 \text{ mbar}$ e.g. SK = -10: $p_s = -10 + 0.5 = -9.5 \text{ mbar}$	DG 120I, DG 450I: $p_s = SK + 0.2 \text{ mbar}$	
------------	--	---	--

The housing must not be in contact with masonry. Minimum clearance 20 mm.

The DG..S is suitable for oxygen and ammonia only (diaphragm made of IIR). Do not use for fuel gases – diaphragm not resist- ant! In the case of oxygen, ensure grease-free installation.

 Continuous operation at high temperatures (e.g. maximum ambient temperature) accelerates the ageing of elastomer materials and reduces the service life (please contact manu- facturer). Ozone concentrations exceeding 200 $\mu\text{g}/\text{m}^3$ or gases containing more than 0.1 %-by-vol. H₂S accelerate the ageing of elastomer materials and reduce the service life.



Ports 3 and 4 are connected to the micro switch chamber. The port that is best protected against soiling (dust/humidity) is to be left open for ventilation (positive pressure measurement) to the atmosphere. If dust exposure in the environment is high, a filter pad, see page 20 (Restrictor orifice), or a filter are to be used in the open port.

Combustion gas or a mixture of combustion gas and air must not be connected to port 3 or 4.

Condensation must not be allowed to get into the housing (if possible, install pipework with an ascending gradient). Otherwise, there is a risk of icing of condensation at subzero temperatures, the switching point shifting or corrosion in the device which can lead to malfunctions.



บริษัท เอดดี เพอร์เฟนส์ จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคเอย: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Project planning information > Installation

When installing outdoors, place the DL in a roofed area and protect from direct sunlight (even IP 65 version). To avoid condensation, the cover with pressure equalization element can be used, see page 19 (Pressure equalization element).

In case of highly fluctuating pressures, install a restrictor orifice, see page 20 (Restrictor orifice).



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**


6 Accessories

6.1 Fastening set with screws, U-shape bracket

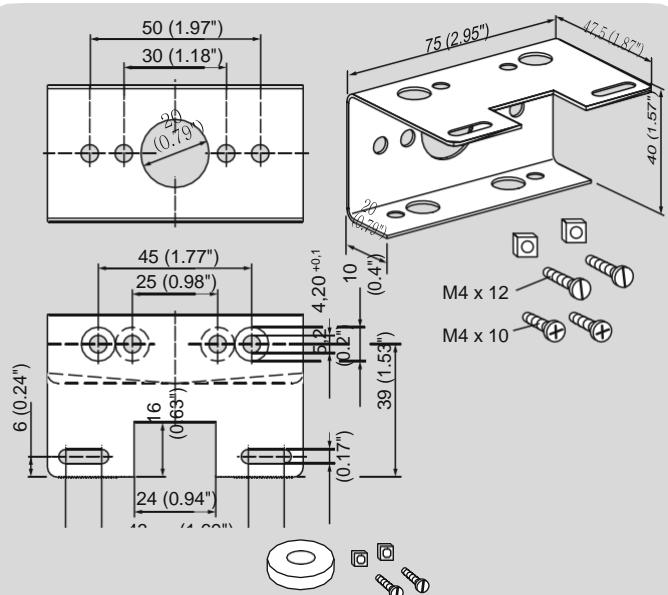

For monitoring a minimum and maximum inlet pressure p_u with two pressure switches attached to one another.

Order No.: 74912250

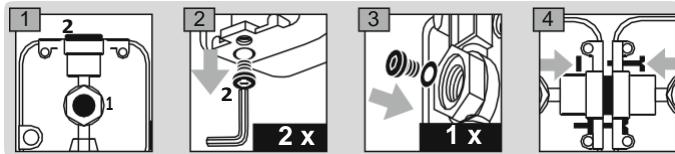


6.3 External adjustment




In order to set the switching pressure from the outside, the cover for external adjustment (6 mm Allen key) for DG..B, DG..U and DG..I can be retrofitted.

Order No.: 74916155

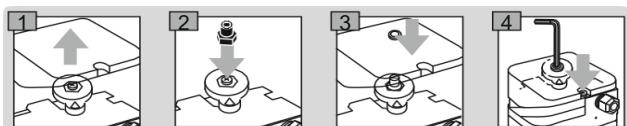

6.4 Pressure equalization element

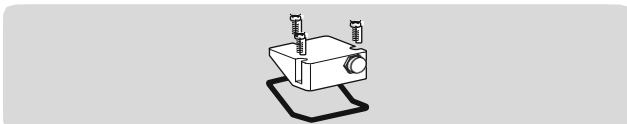

To avoid the formation of condensation, the cover with pressure equalization element can be used. The diaphragm in the screw connector is designed to ventilate the cover, without allowing water to enter.

Order No.: 74923391



บริษัท ออดีดี้ เฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Accessories

6.5 Restrictor orifice

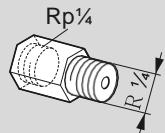


In the case of high pressure fluctuations, we recommend using a restrictor orifice (contains non-ferrous metals):

Hole diameter 2 mm, Order No.: 75456321


hole diameter 3 mm, Order No.: 75441317

6.6 Test key PIA

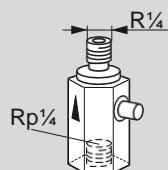

To test the min. pressure switch, the DG can be vented in its switched state using the PIA test key (contains non-ferrous metals).

 Order No.: 74329466



6.7 Filter pad set

To protect the electrical contacts in the DG from dirt particles in the surrounding air or in the medium, use a filter pad at the 1/8" negative pressure port. As standard on IP 65 units.

5-piece filter pad set, Order No.: 74916199

6.8 Tube set



To be used with air only.

 
Order No.: 74912952

6.9 Standard socket set



Order No.: 74915388

6.10 Standard coupler plug



Order No.: 74920412



บริษัท ออดีดี เฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยรัมสพัน เขตวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Accessories

6.11 Pilot lamp set, red or blue

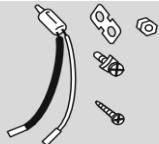

Pilot lamp, red:


110/120 V AC, I = 1.2 mA, Order No.: 74920430

220/250 V AC, I = 0.6 mA, Order No.: 74920429


Pilot lamp, blue:

110/120 V AC, I = 1.2 mA, Order No.: 74916121

220/250 V AC, I = 0.6 mA, Order No.: 74916122

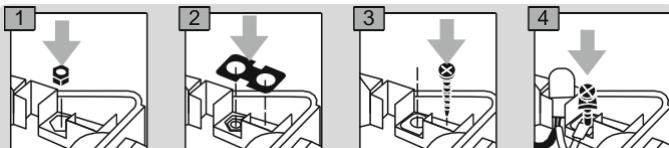


6.12 LED set, red/green

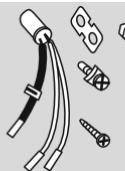

24 V DC, I = 16 mA; 24 V AC, I = 8 mA, Order No.: 74921089

230 V AC, I = 0.6 mA, Order No.: 74923275

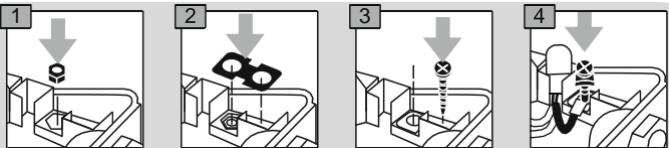



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกรับ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

7 Technical data

Gas type: natural gas, town gas, LPG (gaseous), flue gas, biologically produced methane (max. 0.1 % by-vol. H₂S) and air.

DG: max. inlet pressure p_{u max.} ± 600 mbar (8.5 psig).

Max. test pressure for testing the entire system: temporarily < 15 minutes 2 bar (29 psig).

Switching capacity:

DG:

U = 24 – 250 V AC,

I = 0.05 – 5 A at cos φ = 1,

I = 0.05 – 1 A at cos φ = 0.6.

DG..G:

U = 5 – 250 V AC,

I = 0.01 – 5 A at cos φ = 1,

I = 0.01 – 1 A at cos φ = 0.6.

DG..G

U = 5 – 48 V DC,

I = 0.01 – 1 A.

DG..T:

U = 30 – 240 V AC,

I = 5 A at cos φ = 1,

I = 0.5 A at cos φ = 0.6. DG..TG:

U = < 30 V AC,

I = 0.1 A at cos φ = 1,

I = 0.05 A at cos φ = 0.6.

If the DG (DG..TG) has switched a voltage > 24 V (> 30 V) and a current > 0.1 A at cos φ = 1 or > 0.05 A at cos φ = 0.6 once, the gold plating on the contacts will have been burnt through. It can then only be operated at this power rating or higher power rating.

Maximum medium and ambient temperatures: DG..B, DG..U, DG..I, DG..S: -15 to +80°C (5 to 176°F), DG..H, DG..N: -15 to +60°C (5 to 140°F),

DG..T, DG..HT, DG..NT: -40 to +60 °C (-40 to 140 °F).

Storage and transport temperature: DG: -40 to +80°C (-40 to 176°F), DG..T: -40 to +60 °C (-40 to 140 °F).

RoHS compliant pursuant to 2002/95/EC.

Diaphragm pressure switch, silicone-free.

Diaphragm:

NBR for DG..U, B, N, H, I,

IIR for DG..S.

Housing: glass fibre reinforced PBT plastic with low gas release.

Lower housing section: AISI 12.

Enclosure: IP 54 or IP 65.

Safety class: 1.

Line entrance: M16 x 1.5, clamping range: diameters of 4 to 10 mm, DG..T, DG..HT, DG..NT with 1/2" NPT conduit cable gland.

Type of connection: screw terminals.

Weight: 270 to 320 g (9.5 to 11.3 oz), depending on equipment..



Technical data

7.1 Adjusting range, switching hysteresis

On all DG models (except DG..N), the scale value is set to the switch-on point, and on DG..N, it is set to the switch-off point.

Type	Adjusting range*		Mean switching differential at min. and max. setting		Difference between switching pressure and possible reset		Deviation from the switching point during testing pursuant to EN 1854	
	mbar	"WC	mbar	"WC	mbar	"WC	Gas pressure switch	Air pressure switch
DG 6T	0.5 – 6	0.2 – 2.34	0.2 – 0.3	0.08 – 0.12	–	–	± 15%	± 15% or 0.1 mbar (0.04 "WC)
DG 6	0.4 – 6	–	0.2 – 0.3	–	–	–	± 15%	± 15% or 0.1 mbar (0.04 "WC)
DG 10	1 – 10	0.39 – 3.9	0.25 – 0.4	0.1 – 0.16	–	–	± 15%	± 15%
DG 30	2.5 – 30	–	0.35 – 0.9	–	–	–	± 15%	± 15%
DG 50	2.5 – 50	1 – 19.5	0.8 – 1.5	0.31 – 0.59	–	–	± 15%	± 15%
DG 150	30 – 150	11.7 – 58.5	3 – 5	1.17 – 1.95	–	–	± 15%	± 15%
DG 400	50 – 400	–	5 – 15	–	–	–	± 15%	± 15%
DG 500	100 – 500	39 – 195	8 – 17	3.12 – 6.63	–	–	± 15%	± 15%
DG 10H, DG 10N	1 – 10	0.39 – 3.9	–	–	0.4 – 1	0.16 – 0.39	± 15%	± 15%
DG 50H, DG 50N	2.5 – 50	1 – 19.5	–	–	1 – 2	0.39 – 0.78	± 15%	± 15%
DG 150H, DG 150N	30 – 150	11.7 – 58.5	–	–	2 – 5	0.78 – 1.95	± 15%	± 15%
DG 500H, DG 500N	100 – 500	39 – 195	–	–	4 – 17	1.56 – 6.63	± 15%	± 15%

* Adjusting tolerance = ± 15% of the scale value.

Type	Adjusting range* [mbar]	Mean switching differential at min. and max. setting [mbar]	Deviation from the switching point during testing pursuant to EN 1854	
			Gas pressure switch	Air pressure switch
DG 1,5I	-1.5 to -0.5 and +0.5 to +3	0.2 – 0.5	± 15%	± 15% or 0.4 mbar
DG 12I	-12 to -1 and +1 to +7	0.5 – 1	± 15%	± 15% or 0.5 mbar
DG 18I	-2 to -18	0.5 – 1.5	± 15%	± 15% or 0.5 mbar
DG 120I	-10 to -120	4 – 11	± 15%	± 15%
DG 450I	-80 to -450	10 – 30	± 15%	± 15%

* Adjusting tolerance = ± 15% of the scale value.



Technical data

7.2 Safety-specific characteristic values for DG

For SIL

Suitable for Safety Integrity Level

SIL 1, 2, 3

Diagnostic coverage DC

0

Type of subsystem

Type A to EN 61508-2, 7.4.3.1.2

Mode of operation

High demand mode pursuant to EN 61508-4:2001, 3.5.12

For PL

Suitable for Performance Level

PL a, b, c, d, e

Category

B, 1, 2, 3, 4

Common cause failure CCF

> 65

Application of essential safety requirements

Satisfied

Application of tried-and-tested safety requirements

Satisfied

For SIL and PL

$U = 24 \text{ V DC}, I = 10 \text{ mA}$

B_{10d} value

$U = 230 \text{ V AC}, I = 4 \text{ mA}$

6,689,477 operating cycles

$U = 24 \text{ V DC}, I = 70 \text{ mA}$

4,414,062 operating cycles

$U = 230 \text{ V AC}, I = 20 \text{ mA}$

974,800 operating cycles

Hardware fault tolerance (1 component/switch) HFT

0

Hardware fault tolerance (2 components/switches, redundant operation) HFT

1

Safe failure fraction SFF

> 90%

Fraction of undetected common cause failures β

$\geq 2\%$

Max. service life under operating conditions: 10 years after date of production, plus max. 1/2 year in storage prior to first use, or once the given number of operating cycles has been reached, depending on which is achieved first. The pressure switches are suitable for single-channel systems ($HFT = 0$) up to SIL 2/PL d, and up to SIL 3/PL e when two redundant pressure switches are installed in a double-channel architecture ($HFT = 1$), provided that the complete system complies with the requirements of EN 61508/ISO 13849. For a glossary of terms, see page 27 (Glossary).



บริษัท ออดดี ไฟร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตย ถนนสุขุมวิท แขวงวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com



Technical data > Safety-specific characteristic values for DG

7.2.1 Determining the PFH_D value, the λ_D value and the

MTTF_d value

$$\text{PFH}_D = \lambda_D = \frac{1}{\text{MTTF}_d} = \frac{0.1}{B_{10d}} \times n_{op}$$

7.2.2 Calculating the PFH_D

Switch. cap.	24 V, 10 mA/230 V
n_{op}	1 1/h
n_{op}	8760 1/a
Cycle time	3600 s
B_{10d}	6689477
T_{10d}	10 a
PFH_D (1 DG)	1.49488517562733 1/h
PFD_{avg} (1 DG)	
suitable for	PL d, SIL 2
PFH_D (2 DG)	3.17777644576117 1/h
PFD_{avg} (2 DG)	
suitable for	PL e, SIL 3

PFHD = Probability of dangerous failure (HDM) [1/hour]

PFD_{avg} = Average probability of dangerous failure on demand (LDM)

λ_D = Mean dangerous failure rate [1/hour]

MTTF_d = Mean time to dangerous failure [hours]

n_{op} = Demand rate (mean number of annual operations) [1/hour]



บริษัท เอดดี ฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออคเมบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Technical data

7.3 Dimensions

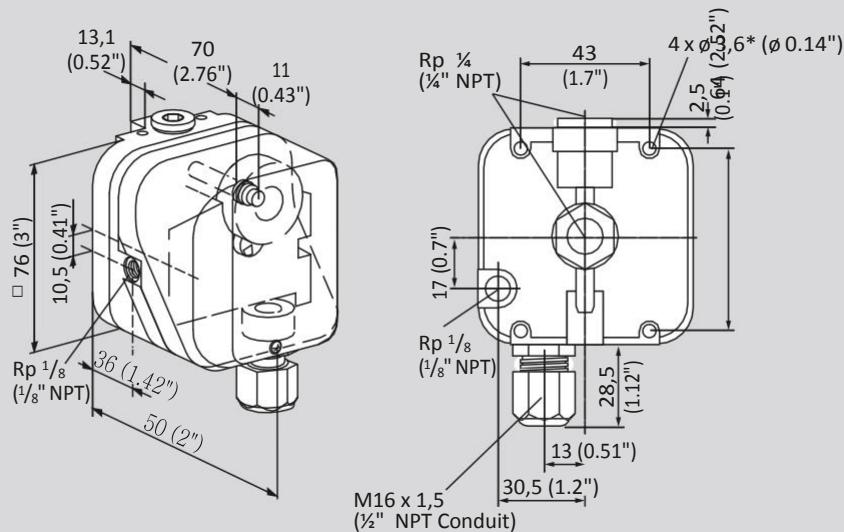

* Holes 10 mm (0.4") deep, for self-tapping screws.

8 Maintenance cycles

At least once a year, twice a year in the case of biologically produced methane.



9 Glossary

9.1 Diagnostic coverage DC

Measure of the effectiveness of diagnostics, which may be determined as the ratio between the failure rate of detected dangerous failures and the failure rate of total dangerous failures

NOTE: Diagnostic coverage can exist for the whole or parts of a safety-related system. For example, diagnostic coverage could exist for sensors and/or logic system and/or final elements. Unit: %.

from EN ISO 13849-1:2008

9.2 Mode of operation

High demand mode or continuous mode

Operating mode, where the frequency of demands for operation made on a safety-related system is greater than one per year or greater than twice the proof-test frequency

from EN 61508-4:2008

9.3 Category

Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behaviour in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability

from EN ISO 13849-1:2008

9.4 Common cause failure CCF

Failures of different items, resulting from a single event, where these failures are not consequences of each other

from EN ISO 13849-1:2008

9.5 Fraction of undetected common cause failures β

Fraction of undetected failures of redundant components due to a single event, whereby these failures are not based on mutual causes

NOTE: β is expressed as a fraction in the equations and as a percentage elsewhere.

from EN 61508-6:2010

9.6 B_{10d} value

Mean number of cycles until 10% of the components fail dangerously

from EN ISO 13849-1:2008

9.7 T_{10d} value

Mean time until 10% of the components fail dangerously

from EN ISO 13849-1:2008

9.8 Hardware fault tolerance HFT

A hardware fault tolerance of N means that $N + 1$ is the minimum number of faults that could cause a loss of the safety function

from IEC 61508-2:2010



บริษัท ออดีดี้ เฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนนราธิวาสราชนครินทร์ แขวงคลองเตยเหนือ กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

**krom
schroder**

Glossary

9.9 Mean dangerous failure rate λ_D

Mean rate of dangerous failures during operation time (T_{10d}).

Unit: 1/h.

from EN ISO 13849-1:2008

9.10 Safe failure fraction SFF

Fraction of safe failures related to all failures, which are assumed to appear

from EN 13611/A2:2011

9.11 Probability of dangerous failure PFH_D

Value describing the likelihood of dangerous failure per hour of a component for high demand mode or continuous mode.

Unit: 1/h

from EN 13611/A2:2011

9.12 Mean time to dangerous failure MTTF_d

Expectation of the mean time to dangerous failure

from EN ISO 13849-1:2008

9.13 Demand rate n_{op}

Mean number of annual operations

from EN ISO 13849-1:2008

9.14 Average probability of dangerous failure on demand PFD_{avg}

(LDM = 1 – 10 switching cycles/year)

Average probability of a dangerous failure of the safety function on demand see EN 61508-6



บริษัท เอดดี เพอร์เฟนส์ จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคเเบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com