Add Furnace Co.,Ltd.

44 ซ.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170. บริษัท เอดีดี เพอร์เนส จำกัด website: <u>https://www.add-furnace.com/</u> โทร: 02-888-3472 Line ID: @add11 e-mail: add028883472@gmail.com

Gas Burner Control Box

For 2-stage atmospheric gas burners

- Possible flame detectors:
- Ionisation probe
- Infra-red flicker detector

INTRODUCTION

The TFI 812.2 gas burner control boxes are capable of controlling and monitoring atmospheric gas burners. They have been tested and approved as per DIN 4788 part 3 edition 04.89 and with the European standard EN 298. They are also suitable for use with stationary warm air generators (as per DIN 4794).

The control boxes are designed for maximum safety in case of fluctuations in the voltage supply. If the mains voltage drops below the permitted level, operation is interrupted and the control box automatically prevents the start sequence from being repeated. In this way, the safety of the system is not put at risk by a drop in the mains voltage.

The control box and the monitoring function which it performs is not negatively affected by occasional stray ignition sparks jumping to the ionisation electrode.

The FR 870 remote reset (item no. 70700) can be connected, and allows remote reset of the control box (see doc. no. 750).

The TFI 812 mod.5 can be installed in place of the TFI 712 F, and the TFI 812 mod.10 can be employed to replace the TFI 712.

It is not necessary to rewire or replace the baseplate. The difference in the heights of the units can be compensated by attaching the reset button extension (item no. 70601).

The difference between the TFI 812.1 and the TFI 812.2 is that the TFI 812.2 control boxes are equipped with the voltage drop fail-safe function. Otherwise, they are identical in terms of operation and possible applications.

CONSTRUCTIONAL FEATURES

The control box is well protected by a flame-resistant, transparent, plug-in type plastic housing which encloses the thermo-mechanical temperature-compensated timing unit, the flame monitoring unit and the reset device.

The reset button, which incorporates an indicator lamp, and the central screw fastening, are situated on the upper part of the control box.

The baseplate, which can be equipped with additional terminals, together with the various optional cable entry points, makes universal wiring possible.

TFI 812



TYPES AVAILABLE

TFI 812.2 mod. 5	Safety interval nominal 5 sec. Pre-ignition time approx. 15 sec. appropriate nominal capacity according to the appliance standort
TFI 812.2 mod. 10	or the gas appliance directive. Safety interval nominal10 sec. Pre-ignition time approx. 10 sec.
	appropriate nominal capacity according to the appliance standort or the gas appliance directive.
TFI 812.2 B mod. 5 TFI 812.2 B mod. 10	dito – without Pre-ignition time dito – without Pre-ignition time

TECHNICAL DATA

Supply voltage	220/240V(-15+10%) 50 Hz (40 - 60 Hz)		
Fuse rating	10 A rapid or 6 A slow		
Power consumption	5 VA		
Max. current per			
output terminal	4 A		
Max. current total	6 A		
Pre-ignition time	15 or 10 sec.		
Delay, post-ignition time	none		
Safety interval nominal	5 or 10 sec.		
Safety interval max.	10 or 20 sec.		
2nd stage delay	approx. 20 sec.		
Reset delay after lockout	approx. 60 sec.		
Permissible ambient temperature -20° C to +60° C			
Sensitivity	1.5 μΑ		
Min. ionisation current required	2 - 3 μΑ		
Ionisation probe insulation	probe - earth		
	greater than 50 M Ω		
Stray capacitance	probe - earth		
	less than 1000 pF		
	(max. 20 m cable)		
Insulation standard	IP 44		
Weight incl. baseplate	250 g		
Mounting attitude	any		

 44 ช.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170.

 บริษัท เอดีดี เฟอร์เนส จำกัด
 website: <u>https://www.add-furnace.com/</u> โทร: 02-888-3472

 Add Furnace Co.,Ltd.
 Line ID: @add11 e-mail: add028883472@gmail.com

COMMISSIONING AND MAINTENANCE

TECHNICAL FEATURES

1. Flame detection

The following types of flame detectors are suitable:

- Ionisation probe, temperature resistant material, well insulated (material and insulation same as for ignition electrode).
- IRD 1020 infra-red flicker detector (see doc. 750)

Flame detection using an ionisation probe is only possible in conjunction with mains supplies which provide a neutral earth connection.



The ionisation rod has to be installed in a way that the distance to the ignition electrode is big enough to prevent the spark to jump to the ionisation rod.

2. Safety

In terms of design/construction and programme sequence, the TFI 812 control boxes conform to the presently applicable European standards and regulations.

3. Installation

At the baseplate:

- 3 earth terminals, with an additional tag for the burner earth.
- 3 neutral terminals, with a fixed, internal through connection to the neutral input, terminal 8.
- 2 independent terminals, which can be used as desired.
- 2 separate slide-in plates and 2 fixed, threaded knockouts as well as 2 knock-outs underneath, facilitate wiring of the baseplate.

General:

- Can be mounted in any position, insulated as per IP 44 standard (unaffected by water spray).
 The control box and detector probe should not, however,
- be subjected to excessive vibration.The applicable installation regulations must be observed during installation.

- The wiring must be checked exactly when commissioning

- the installation. Incorrect wiring could damage the control box, putting the safety of the burner system at risk.
- The chosen fuse rating must not, on any account, be higher than the value given in the technical data. Failure to observe this instruction could, in the case of a short circuit, have serious consequences for the control box or burner system.
- For safety reasons, it must be ensured that the control box performs at least one normal shut-down during every 24 hour period.
- Switch off or disconnect the power before plugging in or unplugging the unit.
- Burner control boxes are responsible for the safety of the system and should not be opened.

2. Routine checks

1. Important notes

On commissioning or after servicing the burner system, or if the system has not been in operation for a long period, a check of the safety-relevant control box functions must be made.

- a) Attempt to start with gas valve closed:
 - At the end of the safety interval
 - -> Lockout
- b) After a normal start, with the burner in operation, close the gas valve:
 - At the end of the safety interval, system attempts to restart
 - -> Lockout

3. Possible faults

Burner does not start:

- Fault in electrical supply, thermostat OFF
- Mains voltage too low

Switches to lockout after attempted start without establishing flame:


- No ignition or no fuel reaching burner
- Flame signal during the pre-purge phase
- Mains voltage more than 15% below nominal value

Burner starts, flame is established but control box switches to lockout after elapse of safety interval:


- No flame signal or signal too weak
- Flame detector dirty or defective

Aบริษัท เอดีดี เฟอร์เนส จำกัด DAdd Furnace Co.,Ltd.

44 ซ.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170. website: <u>https://www.add-furnace.com/</u> โทร: 02-888-3472 Line ID: @add11 e-mail: add028883472@gmail.com

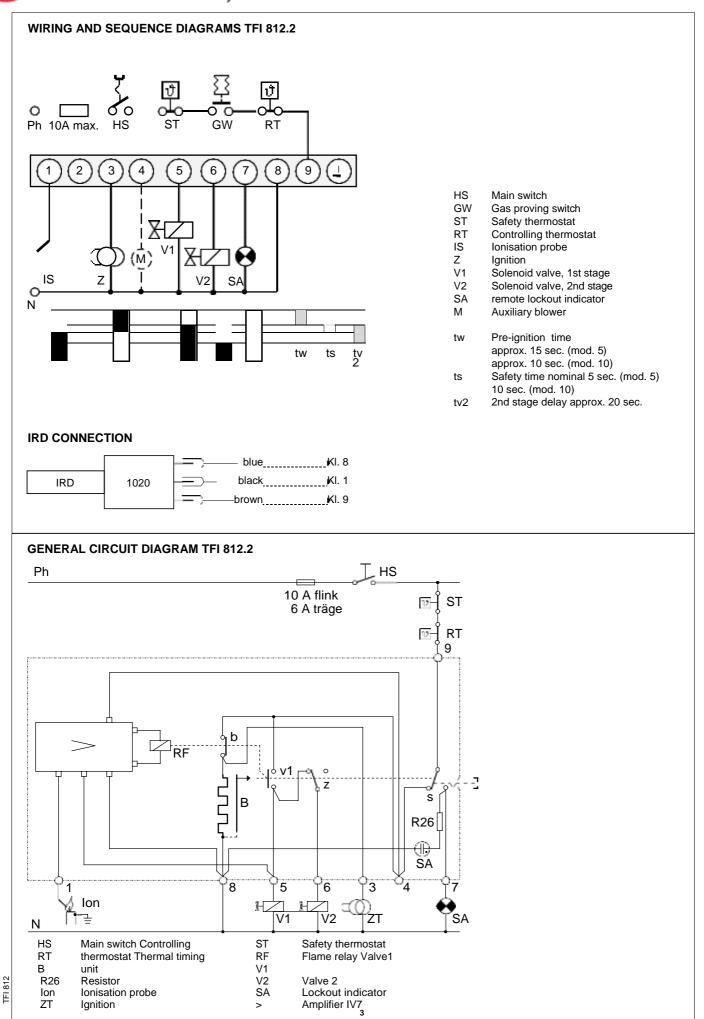

44 ซ.บรมราชชนนี 70 ถ.บรมราชชนนี ศาลาธรรมสพน์ ทวีวัฒนา กทม. 10170. บริษัท เอดีดี เฟอร์เนส จำกัด website: <u>https://www.add-furnace.com/</u> โทร: 02-888-3472 Add Furnace Co., Ltd. Line ID: @add11 e-mail: add028883472@gmail.com

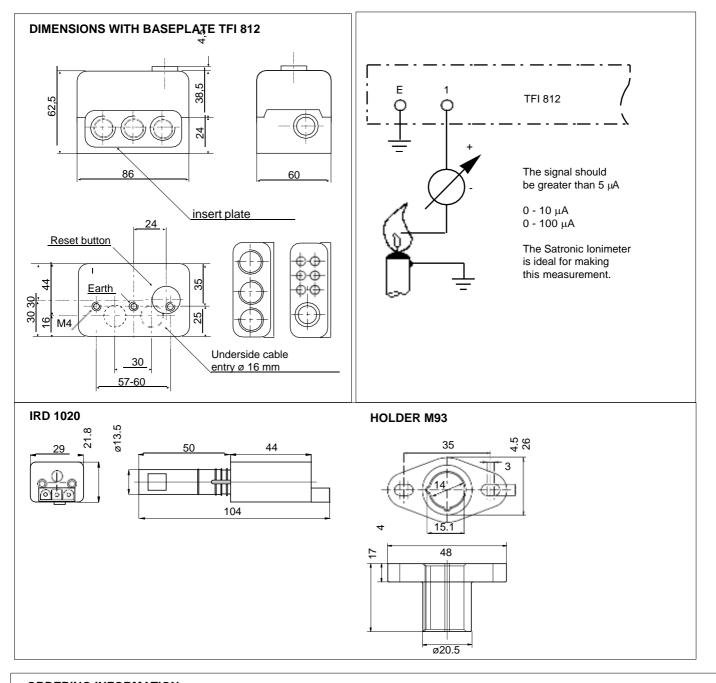

ORDERING INFORMATION	DESIGNATION	ITEM NO.
Control box	TFI 812.2 mod. 5	02601
Control box	TFI 812.2 mod. 10	02602
Control box	TFI 812.2 B mod. 5	02607
Control box	TFI 812.2 B mod. 10	02608
Socket	Wiring base S98 9-pin	75300
Socket Insert	Wiring base S98 12-pin	75310
plate	PG plate	70502
optionally	Cable entry plate	70503
Flame detector	IRD 1020 end-on viewing	16522
Flame detector	IRD 1020 side-on left IRD	16523
Flame detector	1020 side-on right IRD	16521
IRD mounting flange	Holder M93	59093
The above ordering information	on refers to the standard version.	
Special versions are also included in our product range. Specifications subject to change without notice.		

TFI 812