



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: [sales@add-furnace.com](mailto:sales@add-furnace.com)

**Honeywell**  
krom  
schroder



CPS 330 – 4000

## Pressure switches for air CPS 330 – 4000

- Precision differential pressure switches
- Monitoring of air and other non-flammable gases
- High switching point stability
- Switching point selection via hand wheel
- Screw terminals for electrical connections
- Flexible mounting options
- All connections accessible from one side
- CE and ROHS compliant



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

## Application




Easy-to-install connections. accessible from one side.

Pressure switches for air CPS can be used as excess pressure, negative pressure and differential pressure switches for air and other non-flammable gases. They monitor extremely slight pressure differences and trigger switch-on, switch-off or switch-over operations if a set value is reached.

Fields of application include air flow monitoring, fan monitoring or filter monitoring on intake and extract ventilation systems, on air-conditioning systems and in kitchens. frost-protection control on heat exchangers and closed-loop control of butterfly valves for air and fire dampers.

The pneumatic and electrical connections are accessible from the same side in order to ensure space-saving installation.

### Example applications

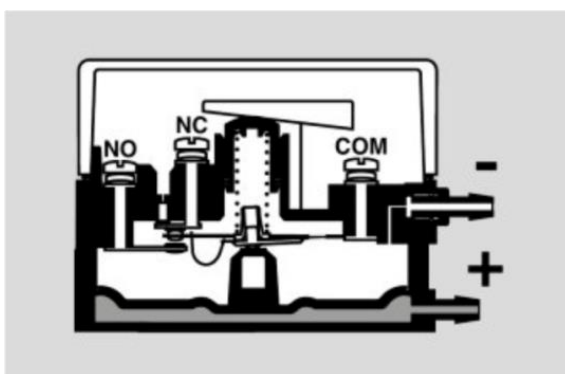

#### Excess pressure measurement

For instance for checking fan function.

#### Negative pressure measurement

For instance for monitoring air locks and checking fan function.

#### Differential pressure measurement

For instance for safeguarding an air flow rate and for monitoring filters and fans.



Pressure switch for fan monitoring in laboratories.



#### Simple mounting

By means of two screws on the mounting plate or air duct.



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com



**Mounting without the need for tools or screws**

Optional S-clip for fast installation and removal of the pressure switch. Only two holes in the mounting plate or air duct are required for secure mounting.



**Rugged, locked mounting**

Optional, L-shaped or Z-shaped angle bracket for fast installation and removal with diverse mounting options, even with only one screw. The angle bracket increases the distance between pressure switch and mounting plate and protects against hot mounting plates.



**Clearer handling in complex installations**

Optional scale marking, e.g. for pressure switches with the same switching point setting. Can simply be plugged on. In various colours.



**Easier diagnosis and maintenance**

Red pilot lamp, green pilot lamp or red-green LED to indicate the switching status of the pressure switch. Optional mounting hardware set.



**Safe, no-pressure-loss connection with optional set of tubes**

Duct connection flange and angular hose connector for no-kink connection of pressure switch and pressure measuring point.

Add-ons for use on insulated and lagged ducts.



Angle connector for boosting air streams which are too low for the adjusting range of the pressure switch



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออกแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: [sales@add-furnace.com](mailto:sales@add-furnace.com)

## Technical data

Type	Adjusting range Pa	Switching hysteresis Pa
CPS 330	20 - 330	8 - 20
CPS 450	30 - 500	12 - 30
CPS 510	100 - 510	15 - 30
CPS 800	50 - 800	18 - 35
CPS 1100	100 - 1100	20 - 40
CPS 1600	400 - 1600	35 - 60
CPS 2400	200 - 2400	40 - 70
CPS 4000	500 - 4000	60 - 100

current > 0.1 A once, the gold plating on the contacts will have been burnt through. It can then only be operated at this power rating or higher power rating.

Contact gap < 3 mm ( $\mu$ ).

Line entrance: M16 x 1.5.

Enclosure to IEC 60529: IP 54.

Safety class II to VDE 0106-1.

Diaphragm:

Tempered LSR diaphragm system.

Max. inlet pressure  $p_e$  or differential pressure:

5000 Pa.

Ambient temperature:

-15 to +85°C.

Storage and transport temperature:

-40 to +85°C.

Installation position: Arbitrary.

## Type code

Code	Description
CPS	Adjusting range:
330	20 - 330 Pa
450	30 - 500 Pa
800	50 - 800 Pa
1100	100 - 1100Pa
1600	400 - 1600 Pa
2400	200 - 2400 Pa
4000	500 - 4000 Pa
G	Gold contacts

## Maintenance

We recommend a function check once a year.