



บริษัท เอดีดี เฟอร์เนส จำกัด

ADD FURNACE CO.,LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

SIEMENS

7922

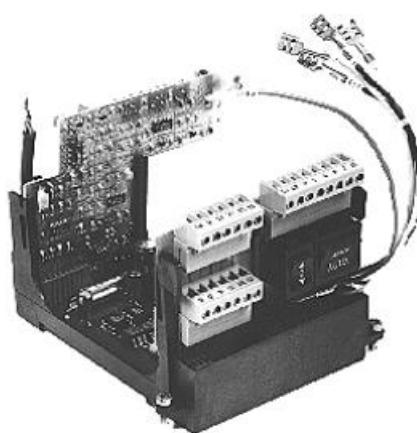

Analog Input Modules

AGA56...

Analog input modules for the control of SQM5... air damper actuators by continuous analog control signals, such as 4...20 mA, and continuous analog position feedback signals.

For supplementary Data Sheets, refer to SQM5... Data Sheet N7815 and ASZ... Data Sheet N7921.

AGA56... and this Data Sheet are intended for use by OEMs which integrate the modules in their products!

Use

The AGA56... are auxiliary modules for use with the SQM5... air damper actuators. They can be integrated into the SQM5... on site, or are supplied with the actuator, ready built in.



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตพญาไท กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออฟฟิต: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Warning notes



To avoid injury to persons, damage to property or the environment, the following warning notes should be observed!

Do not make any modifications to the modules!

- All activities (mounting, installation and service work, etc.) must be carried out by qualified staff
- Before performing any wiring changes in the connection area, completely isolate the burner control from the mains supply (all-polar disconnection)
- Ensure protection against electric shock hazard by providing adequate protection for the burner control's connection terminals
- Ensure that wiring is in an orderly state
- In the event of failure, the input modules do not offer intrinsic safety. Hence, depending on the application and the requirements, adequate safety measures outside the modules must be taken

Mounting notes

- Ensure that the relevant national safety regulation are complied with

Installation notes

- When making the wiring, ensure that AC 230 V mains voltage is strictly separated from protective low-voltage

Commissioning notes

- Before commissioning ensure that wiring is in an orderly state

Standards and certificates



Conformity to EEC directives

Electromagnetic compatibility EMC (immunity) 89 / 336 EEC
- Low-voltage directive 73 / 23 EEC



ISO 9001: 2000
Cert. 00739



ISO 14001: 1996
Cert. 38233

Service notes

- Each time a unit has been replaced, check to ensure that wiring is in an orderly state

Disposal notes



The unit contains electrical and electronic components and may not be disposed of together with household waste.
Local and currently valid legislation must be observed.



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com

Type summary (other types of modules on request)

| Functions | Control inputs | Position feed-back signal | Operating voltage (50...60 Hz) | Type reference | Identification letter ¹⁾ |
|------------------------------------|--|---------------------------|--------------------------------|----------------|-------------------------------------|
| Manual control | --- | --- | AC 24...240 V | AGA56.1A97 | A |
| Adjustment of control range | 4...20 mA | --- | AC 100...110 V | AGA56.41A17 | G |
| Manual control | | | AC 220...240 V | AGA56.41A27 | G |
| | | | AC 24 V | AGA56.41A87 | G |
| | DC 0...2 V in connection with 0...135 & potentiometers (balance relay) up to 0...1000 & ²⁾ | --- | AC 100...110V | AGA56.42A17 | H |
| | | | AC 220...240 V | AGA56.42A27 | H |
| | | | AC 24 V | AGA56.42A87 | H |
| | DC 0...10 V | --- | AC 100...110 V | AGA56.43A17 | K |
| | | | AC 220...240 V | AGA56.43A27 | K |
| | | | AC 24 V | AGA56.43A87 | K |
| Adjustment of control range | 0...20 mA | 0...20 mA | AC 100...110 V | AGA56.9A17 | Z |
| Linearization of angle of rotation | 4...20 mA | 4...20 mA | AC 220...240 V | AGA56.9A27 | Z |
| Readjustment of control signal | DC 0...10 V | DC 0...10 V | AC 24 V | AGA56.9A87 | Z |
| Presetting of fixed position | DC 0...2 V | | | | |
| Manual control | in connection with 0...135 & potentiometers (balance relay) up to 0...1000 & ²⁾ | | | | |

1) Type suffix (6th digit after the dot)

2) Any intermediate range possible

Ordering

Supply of input module and potentiometer:

| | |
|-----------------------------|---|
| - Integrated in the SQM5... | Part of type reference of the SQM5... Identification letter and identification number (refer to «Type summary») |
| - As an individual item | Type reference of input module and potentiometer (refer to «Type summary» and «Accessories») |

Accessories

Potentiometers

Every input module requires one potentiometer.

| | Type reference | Identification number * |
|---|----------------|-------------------------|
| 1000 & / 90° / conductive plastic | ASZ12.803 | 3 |
| 1000 & / 135° / conductive plastic | ASZ12.833 | 4 |
| 1000 & / 1000 & / 90° / conductive plastic | ASZ22.803 | 7 |
| 1000 & / 1000 & / 135° / conductive plastic | ASZ22.833 | 8 |

*) Type suffix (7th digit after the dot)



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO.,LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตวิภาวดี กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

https://www.add-furnace.com E-mail: sales@add-furnace.com**Technical data**

| | | |
|--|-------------------------------------|---|
| General data | Type reference - ...A27 | Operating voltage AC 220 V -15 %...AC 240 V +10 % |
| | - ...A17 | AC 100 V -15 %...AC 110 V +10 % |
| | - ...A87 | AC 24 V -15 % / +10 % |
| | - ...A97 | AC 24 V -5 %... AC 240 V +10 % |
| | Frequency | 50...60 Hz ±6 % |
| | Degree of protection | IP 54 to IEC 529, when mounted in the SQM5... |
| | Safety class | to IEC 730-1, when mounted in the SQM5... |
| | - AGA56...A17, ...A27 | I |
| | - AGA56...A87 | III |
| | Input resistance | |
| | - Current input | ≤300Ω |
| | - Voltage input | ≥100 kΩ |
| | Power consumption | 2.8 VA (without actuator) |
| | Vibrations | 30 m/s ² (3 g) to IEC 68-2-6 |
| | Vibration range | 2...100 Hz |
| | Perm. input line lengths | ≤ 100 m |
| | Temperature drift of output signals | ≤ 2.5 % referred to entire ambient temperature range |
| | Weight | approx. 330 g |
| | Perm. loading on outputs | |
| | - Current output | short-circuit-proof to IEC 381 |
| | - (Current) total load | max. 600 Ω |
| | - Voltage output | ≥ 1.5 kΩ |
| | - Total load all simultaneously | to IEC 381 |
| | DC current signals | to IEC 381 T1 |
| | DC voltage signals | to IEC 381 T2 |
| For assignment of connection terminals and further specification of the inputs and outputs, refer to «Assignment of terminals / Legend» | | |
| Environmental conditions | Transport | DIN EN 60 721-3-2 |
| | Climatic conditions | class 2K2 |
| | Mechanical conditions | class 2M2 |
| | Temperature range | -30...+60 °C |
| | Humidity | < 95 % r.h., Climate F to DIN 40 040 |
| | Operation | DIN EN 60 721-3-3 |
| | Climatic conditions | class 3K5 |
| | Mechanical conditions | class 3M2 |
| | Temperature range | -20...+60 °C of SQM5... with AGA56... build in |
| | Humidity | < 95 % r.h., Climate F to DIN 40 040 |

**Condensation, formation of ice and ingress of water are not permitted!**



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตพญาไท กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออฟฟิต: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Function

The following functions are provided:

- Manual control
- Adjustment of the control range
- Linearization of the angle of rotation
- Readjustment of the control signal
- Presetting the fixed position

(For availability, refer to «Type summary / Functions»)

Manual control

After operating the «MAN./AUTO.» switch and changing from «AUTO» to «MAN», the actuator can be opened or closed with the « $\frac{2}{0}/\frac{1}{4}$ » toggle switch.

Adjustment of the control range


Using the two potentiometers «MIN» and «MAX», the actuator's working range can be limited to between 0° and 90° or 135° .

Adjusting the limitations

- Set switch «S1» to «MIN»
- Set «MIN» potentiometer to a position between 0° and 67.5° or 101°
- Set switch «S1» to «MAX»
- Set «MAX» potentiometer to a position between the previously set «MIN» angle and 90° or 135°

The «MAX» angle value must be greater than the «MIN» angle value!

- Set switch «S1» to «OPE». In operation, switch «S1» must be in position «OPE»

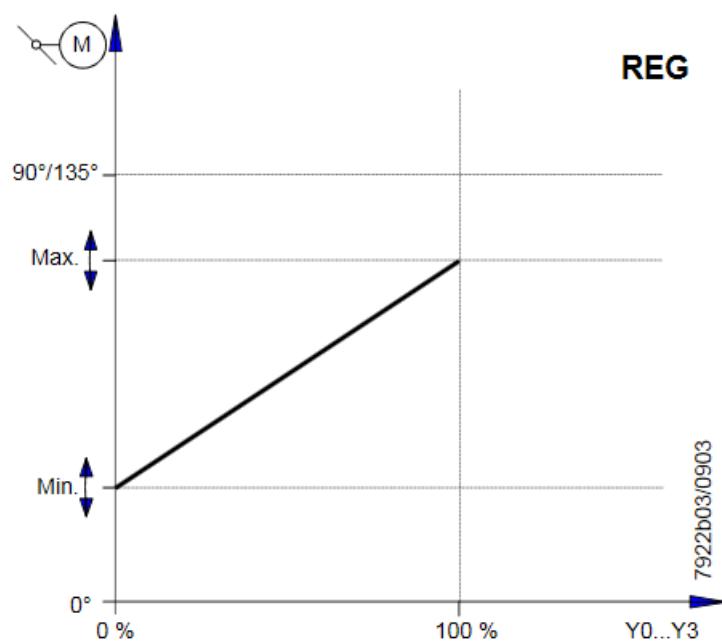



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตพญาไท กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com


Readjustment of the control signal

The control signal can be readjusted using the external «ZF» signal (4...20 mA).

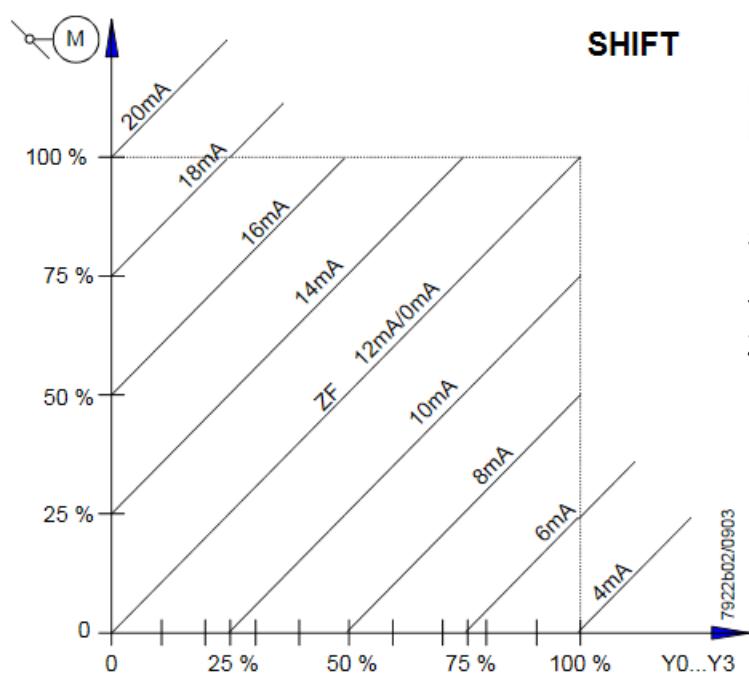

Linearization of the angle of rotation

By setting shorting plug «J1» to position «1», the proportional behavior of the actuator (curve ②) can be matched to the control (curve ①). In the case of small signals, linearization of the angle of rotation produces over proportionally small angular changes and, in the case of greater signal, over proportionally large angular changes. Used in connection with non-linear regulating units, such as air dampers.

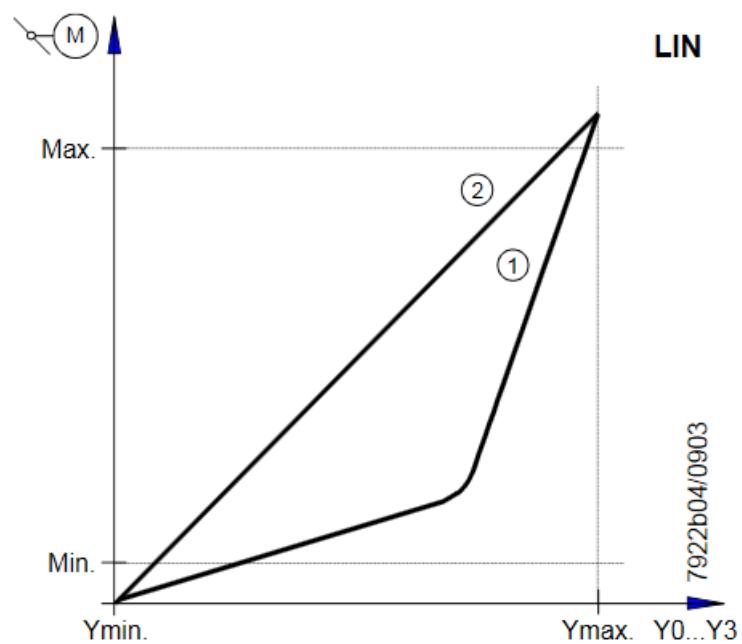



บริษัท เอดีดี เพอร์เฟส จำกัด

ADD FURNACE CO., LTD.


44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตวิวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: 08-08-170-170 แฟกซ์: 02-888-3258


<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Presetting the fixed position

Using potentiometer «POS», the actuator's angular position can be preset. This position is approached independent of control signals when operating voltage is present at the input of «POS» (Terminal «P»). Position «POS» can be adjusted within the entire range of angular rotation.

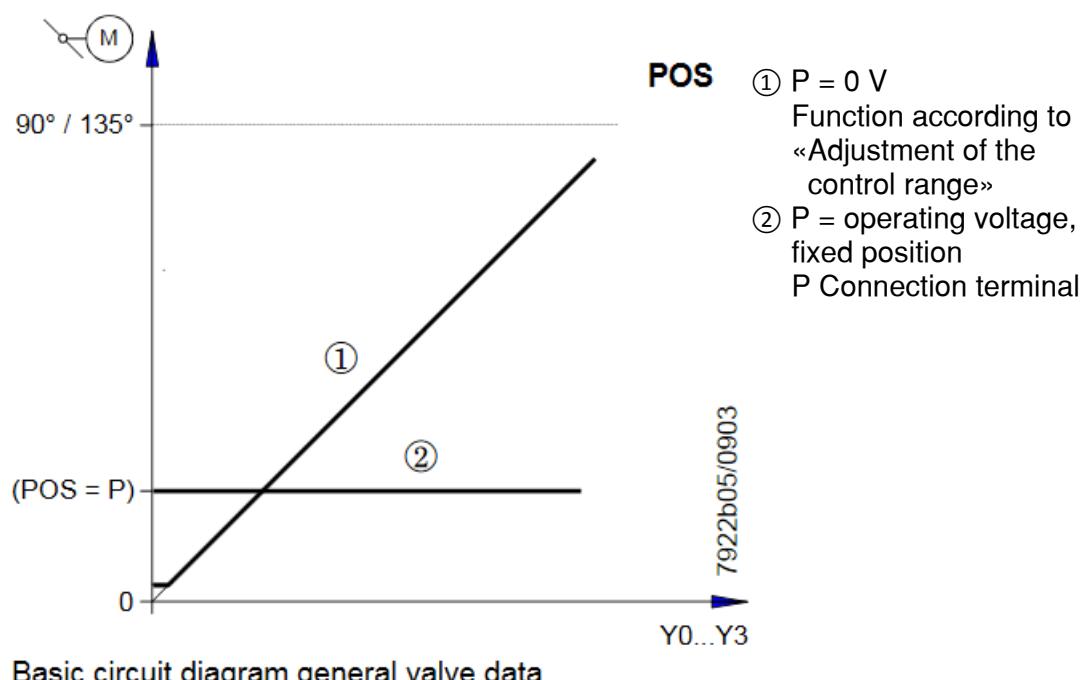

Basic circuit diagram

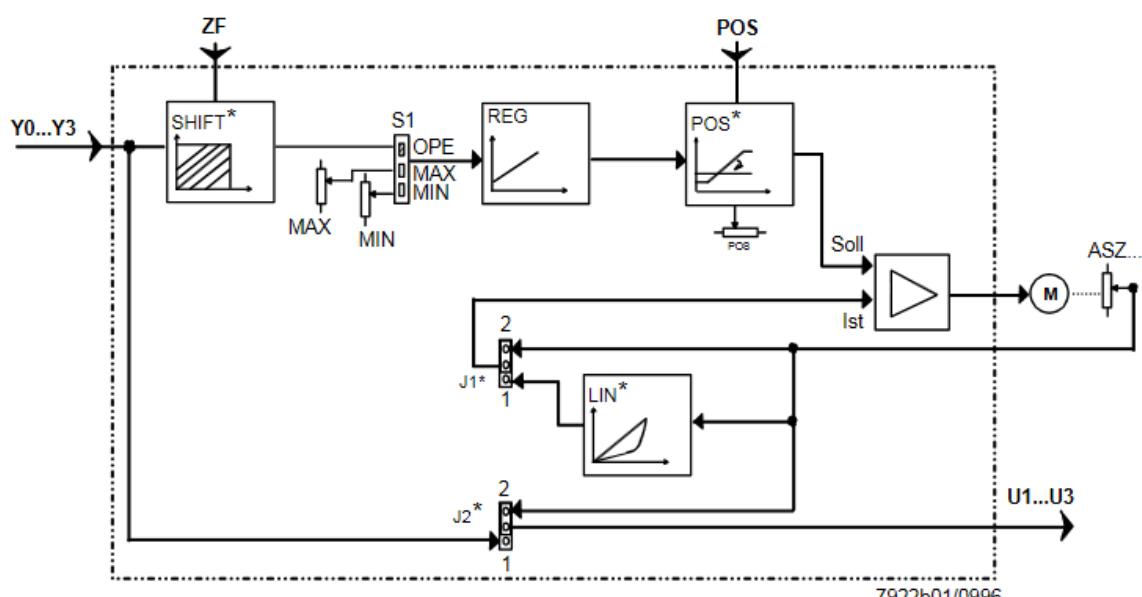

* Only contained in the AGA56.9....!

| | | | |
|--------|--|---------|------------------------------------|
| Legend | ASZ... Potentiometer | POS | Preset fixed position |
| | J1 Shorting plug | REG | Adjustment of the control range |
| | J2 Shorting plug | S1 | Switch |
| | L Live conductor | SHIFT | Readjustment of the control signal |
| | LIN Linearization of angle of rotation | U1...U3 | Control outputs |
| | M Air damper actuator | Y0...Y3 | Control inputs |
| | OPE Operating position | ZF | External signal for SHIFT |



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงคลองเตยเหนือ เขตพญาไท กรุงเทพฯ 10170


โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com


Assignment of terminals

Safety extra low-voltage terminals

AGA56.9...

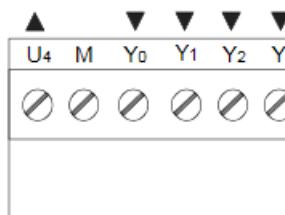


Operating voltage terminals

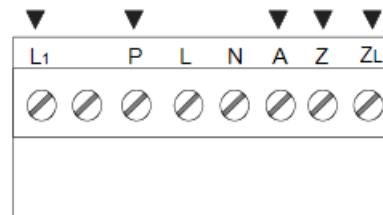


Screw terminals for single-wire cables up to 2.5 mm² (AWG12)




AGA56.41...

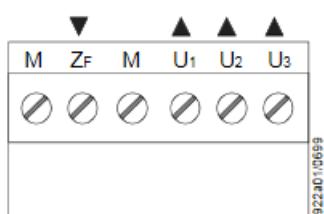

AGA56.42...

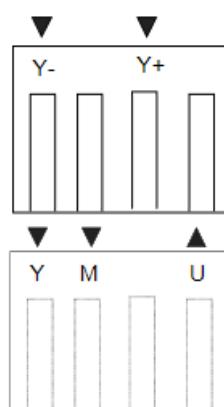

AGA56.43...

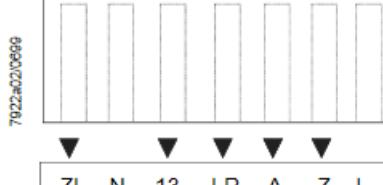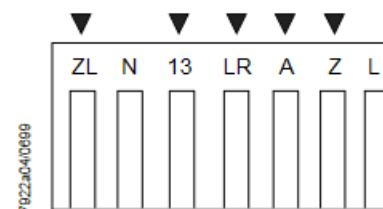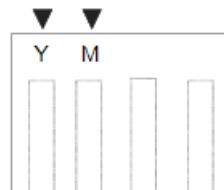

Terminals to RAST5 standard, also suited for use with quick connectors to DIN 46 244-A 6.3-0.8

Terminals to RAST5 standard, also suited for use with quick connectors to DIN 46 244-A 6.3-0.8

Terminals to RAST5 standard, also suited for use with quick connectors to DIN 46 244-A 6.3-0.8

| | | |
|---------------|--|--|
| Legend | A | Signal for opening the actuator → Limited by end switch in the SQM5... |
| | L | Live conductor |
| | L1, LR | Enabling control |
| | M | Ground |
| | N | Neutral conductor |
| | P | Positioning signal |
| | U, U4 | Constant power supply DC 2 V for external potentiometer 135 Ω...1 kΩ, e.g. in connection with a balance relay system |
| | U1 | Control output DC 0...10 V |
| | U2 | Control output 0...20 mA |
| | U3 | Control output 4...20 mA |
| | Yo | Control input DC 0...2 V from external potentiometer 135 Ω...1 kΩ, e.g. in connection with a balance relay system |
| | Y1 | Control input DC 0...10 V |
| | Y2 | Control input 0...20 mA |
| | Y3 | Control input 4...20 mA |
| | Y+ | Control input +pole |
| | Following applies to AC 24 V versions: | |
| | Go = N = M | |
| | G = L | |

Following applies to AC 24 V versions:

Go = N = M

G = L

The following signals may not be present at the same time:

- L1, LR with A, Z, ZL or 13

- A with Z, ZL or 13

| | |
|-------|--|
| Y- | Control input -pole |
| Y | AGA56.42...: same as Yo AGA56.43...: same as Y1 |
| Z, 13 | Signals for closing the actuator, «CLOSED» position limited by end switch in the SQM5..., 2 parallel inputs for <ul style="list-style-type: none"> - signal from the burner control and - feedback of the AGA56...-internal control signal «ZL» (link ZL → 13) |
| ZF | <u>Use:</u> Air damper does not close when burner is «OFF», that is, when «Ignition position» corresponds to the «CLOSED» position. Ends of output cables no. 3 and no. 13 must be stripped |
| ZL | Control input 4...20 mA for readjustment of the control signal |
| | Signal for closing the actuator → Limited by auxiliary switch in the SQM5... |

Example: ignition load
Signals and power supply with **operating voltage**

A, L, Z, ZL, 13, L1, P, LR





บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170



โทร: 02-888-3472 โทร: ออคแบบ:08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Internal diagrams and connection diagrams

AGA56.1A97

• Manual control

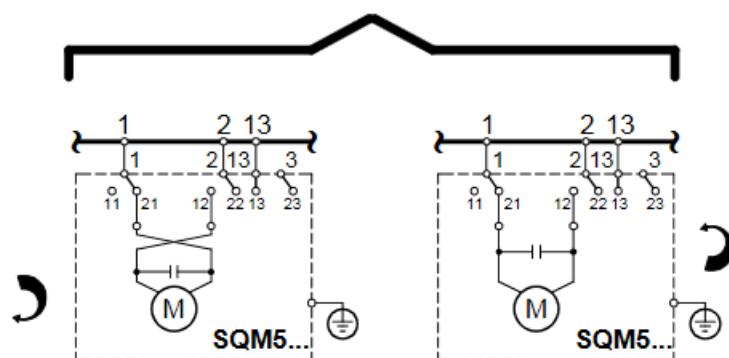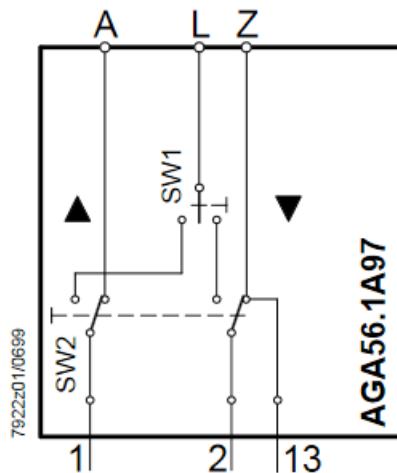


AGA56.4...

• Manual control

• Adjustment of the control range

...A87 : DC 24 V / 50..60 Hz
...A27 : AC 220..240 V / 50..60 Hz
...A17 : AC 100..110 V / 50..60 Hz

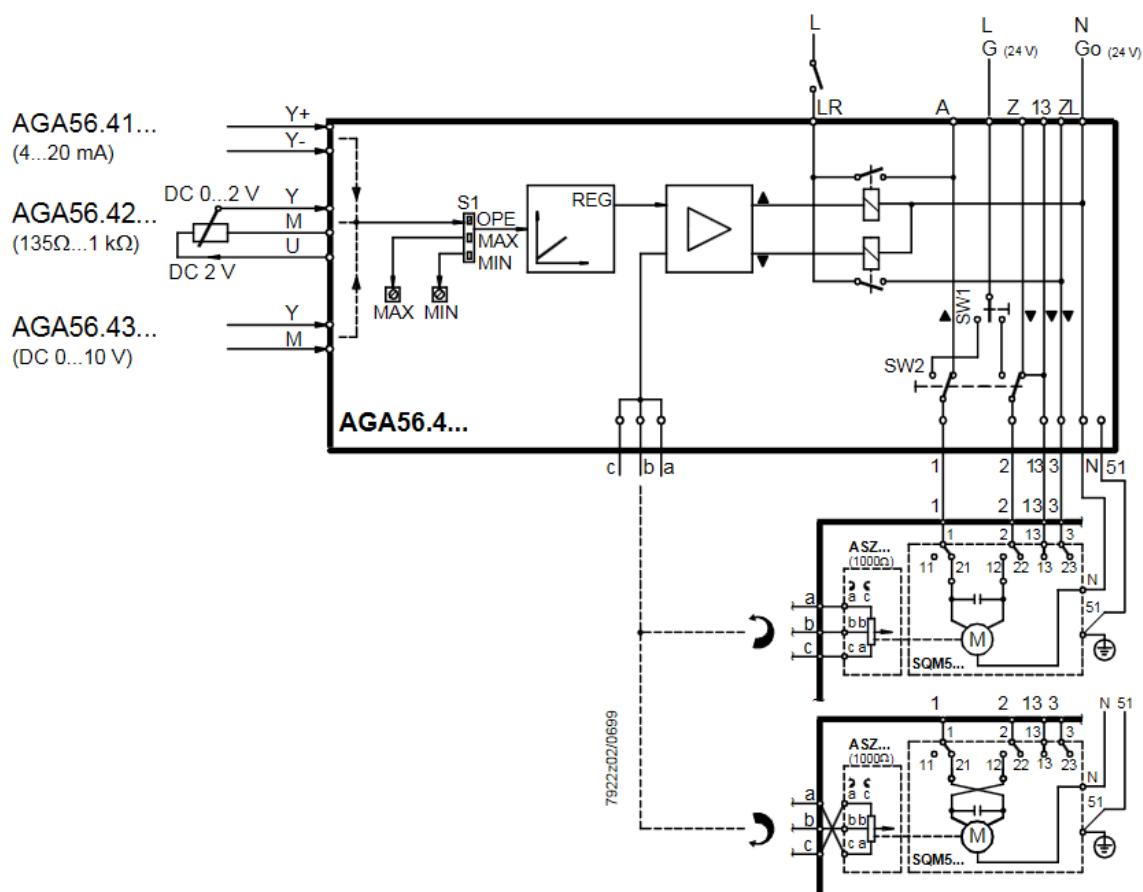



บริษัท เอดดี ฟอร์นেส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com


AGA56.9...

- Manual control
- Adjustment of the control range «REG»
- Readjustment of the control signal «SHIFT»
- Linearization of the angle of rotation «LIN»
- Presetting the fixed position «POS»

...A87 : DC 24 V / 50...60 Hz

...A27 : AC 220...240 V / 50...60 Hz

...A17 : AC 100...110 V / 50...60 Hz

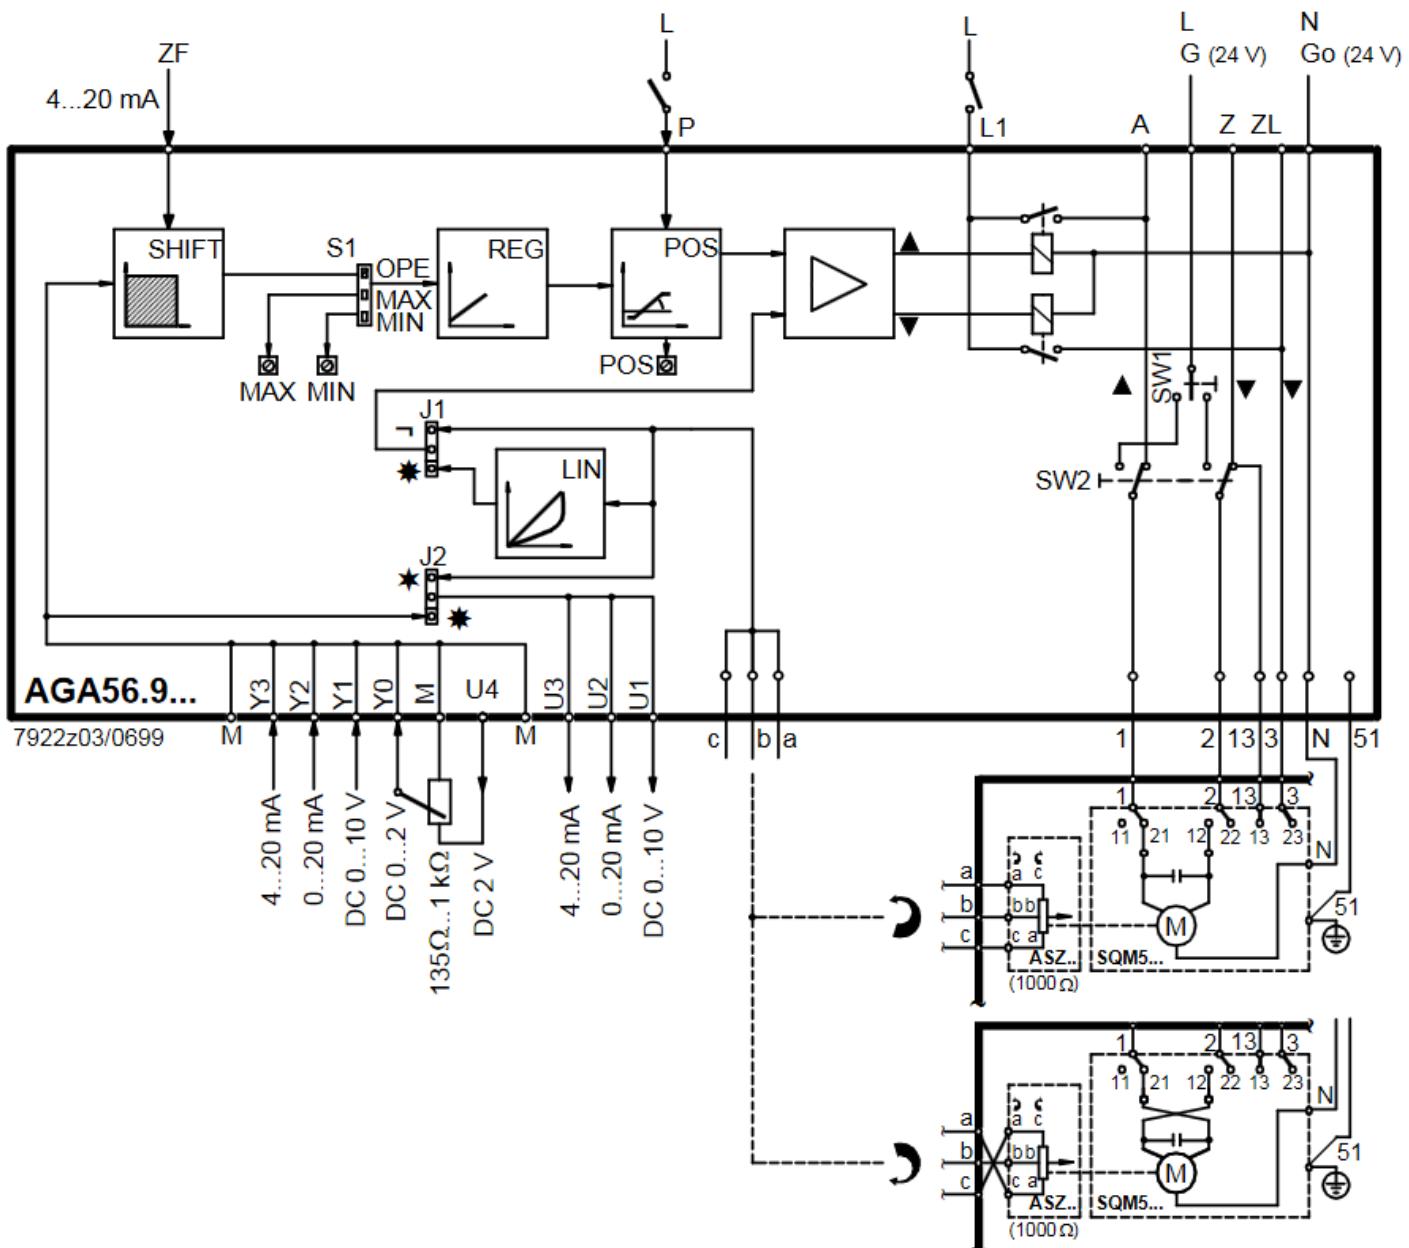



บริษัท เอดดี เฟอร์เนส จำกัด

ADD FURNACE CO., LTD.

44 ซอยบรมราชชนนี 70 ถนนบรมราชชนนี แขวงศาลาธรรมสพน์ เขตทวีวัฒนา กรุงเทพฯ 10170

โทร: 02-888-3472 โทร: ออคแบบ: 08-08-170-170 แฟกซ์: 02-888-3258

<https://www.add-furnace.com> E-mail: sales@add-furnace.com

Former Executions




Please note

Executions supplied until end of 1999


AGA56.41...

AGA56.42...


AGA56.43...

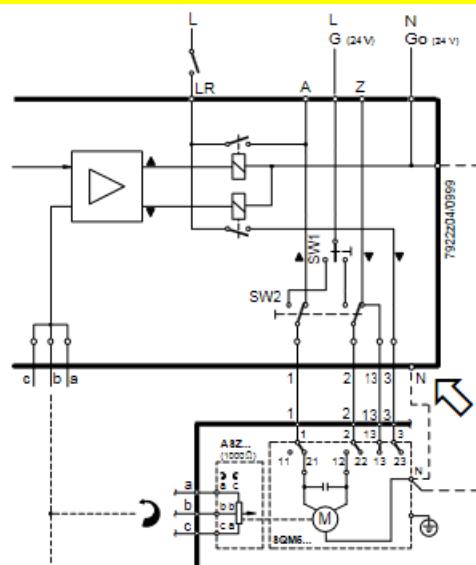


Current execution

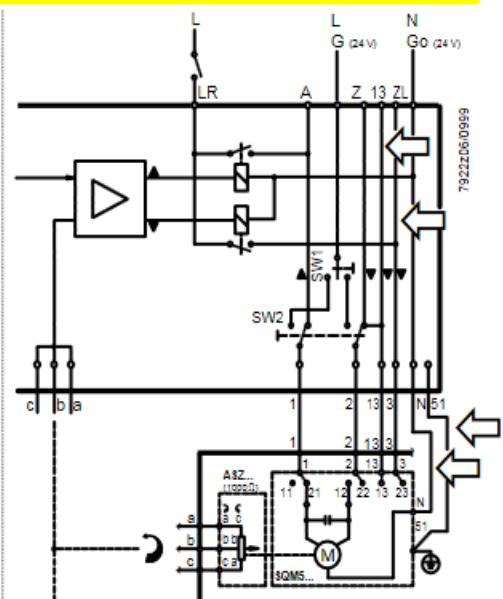

Terminal assignment


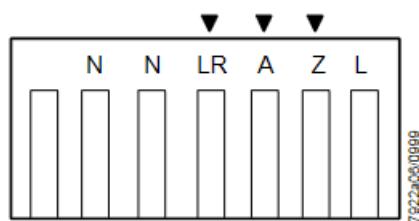


AGA56.9...

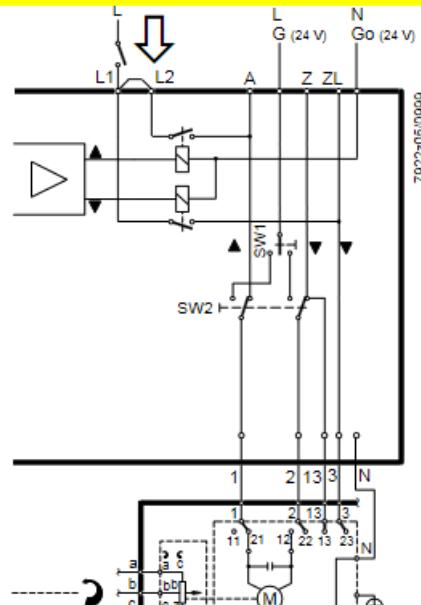

792205/0999

Terminal assignment

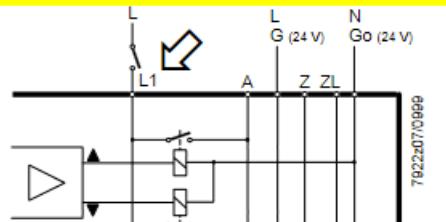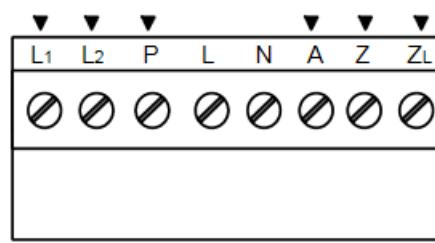

792207/0999